VoSKY Multimedia Touch Screen Videophone for Skype

User Manual

Version 1.0

How to Read This User Manual

The following sections explain some of the symbols and notations used in this user manual and available for VoSKY Multimedia Touch Screen Videophone (Model: MTV-101) for Skype.

Conventions

To make sure that you perform certain operations properly, take note of the following symbols used throughout this manual:

Note:Tips and additional information to help you complete an operation.

Warning: Reminders on actions or configurations that should be avoided.

Example: Examples to help you complete an operation.

Typography

Bold: Menus and menu commands, command buttons, tabs, options, and service or process names.

Italics: References to other documentation.

Safety and Care

This product has been tested to meet or exceed the latest standards of safety for consumer hardware devices. However, to ensure your safety please read the following safety handling and care instructions.

CAUTION

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

Warning

The battery cover on the bottom is an important safety component. Please do not use the product when the cover is not well positioned. Please contact your dealer if the cover is missing.

Device Setup

- Always keep the product dry and free from dust.
- Use the product according to the instructions in this User Manual.
- Do not use this device near water or a heated source such as a radiator.
- Set up the device on a stable surface.
- Do not use this device in extreme temperature environments. This device should only be operated in environments between 5˚C and 35˚C.

Device Care

- This device is intended for use with the power adapter included with the device. Using any other power supply may be dangerous and will void your warranty.
- Do not spill water or any other liquids on the device.
- Unplug power and network cables from the power outlets before cleaning the device. Even with the power switch off, a small amount of electrical current will flow through the device.
- If you encounter any technical problems with the device, contact VoSKY technical support at http://www.vosky.com.

Table of Contents

Introduction **1**
Key Features **1**
Package Contents **2**
System Requirements **3**
Getting to Know Your MTV **4**
Setting up your MTV **5**
Using your MTV **10**
Home Screen 10
Skype 10
Signing Into Skype 10
Skype Main Menu 15
Viewing Contacts 16
Adding a Contact 17
Skype Settings 20
Skype Video Options 21
History 22
Set Status 23
See Myself 24
Account Info 28
Calls 30
Placing Skype Calls 30
Calling Mobile or Landline Numbers 32
Receiving and Answering Calls 34
Call Screen Options 35
Missed Calls 36
Video 37
Video Selection 37
Video Playback 37
Video Menu 38
Music – Local Media 39
Music Selection 39
Music Playback 39

Music Menu 40
SHOUTcast™ Radio 41
What is SHOUTcast™ Radio? 41
Station Selection 41
Quick Search 42
Advanced Search 42
Station Playback 43
Photos – Local Media 44
Local Photo Selection 44
Local Photo Viewing 44
Local Photo Menu 45
FrameChannel 46
Configuration 46
Viewing Channels 48
FrameChannel Menu Options 50
Photo Mail 50
Configuration 50
Syncing 52
Viewing 53
Calendar 55
Calendar 55
Slideshow 55
Settings 56
Source Drive 56
Internet Connection 56
Backlight 57
Date & Time 57
Language 58
Reset Device 58
Touchscreen Calibration 59
Specifications 60
Limited Warrant 61

Introduction

Congratulations on purchasing your VoSKY Multimedia Touch Screen Videophone (MTV). We recommend reading through this section to familiarize yourself with the features of the Multimedia Touch Screen Videophone, and to aid with proper setup and operation of the device.

VoSKY introduces an innovative communication and multimedia touchscreen solution for work or home with the Multimedia Touch Screen Videophone.

The MTV is an all-in-one multimedia device that combines a Skype video speakerphone, digital photo frame and media player. The MTV lets you place or receive Skype calls directly from its touchscreen interface. With MTV you can also view videos, listen to music, and display pictures.

Multimedia Touch Screen Videophone

Key Features

Touchscreen: Large 7” color LCD touch screen (800x480 resolution)

Skype: Free Skype-to-Skype voice and video calls or make low cost calls to landlines and mobile phones. Visit http://www.skype.com for more information

Video Calls: With the integrated camera, enjoy smooth and clear Skype video calls.

Video Playback: Play today's most popular video formats straight from your Multimedia Touch Screen Videophone device. Video files can be played from your SD/MMC card or a USB flash drive.

Music Playback: Listen to music anywhere you have your Multimedia Touch Screen Videophone. MTV will auto-detect all playable music files from your SD/MMC card or USB flash drive. You'll be able to listen to all your favorite songs with crisp, clear sounds through MTV's integrated speakers.

MTV also includes SHOUTcast™ Radio streaming radio. Browse through thousands of free online streaming radio stations and listen directly on the MTV.

Photo Display: Use MTV to display your favorite photos. MTV can display photos from your SD/MMC card, USB flash drive, or even pull them straight from your email account. View them one at a time or use the slideshow feature to automatically scan through all your images.

MTV also supports FrameChannel, allowing you to personalize and manage the photo content displayed on your MTV through your FrameChannel account.

Mobility: Multimedia Touch Screen Videophone has a built-in 802.11 b/g wireless card for total wireless connectivity. MTV also supports all major wireless security standards, including: WEP, WPA, WPA2, and WPS. A 10/100 Mb Ethernet port is also included for wired connections.

Package Contents

- VoSKY Multimedia Touch Screen Videophone device
- RJ-45 CAT5e Ethernet cable
- Power adapter
- Quick Start Guide

☞ **Note:** A detailed user manual is available online at http://www.vosky.com/mtp-support

☞ **Note:** If any of the above items is damaged or missing, you may contact your VoSKY dealer or visit http://www.vosky.com for more help.

System Requirements

- Broadband Internet network connection required.
- An available wireless access point is required if connecting wirelessly.
- Certain apps may require registration or account verification using a personal computer with internet access.
- Select content provided, subject to change. Certain online content quality dependent upon broadband speed and delivery by content provider.

Getting to Know Your MTV

Front

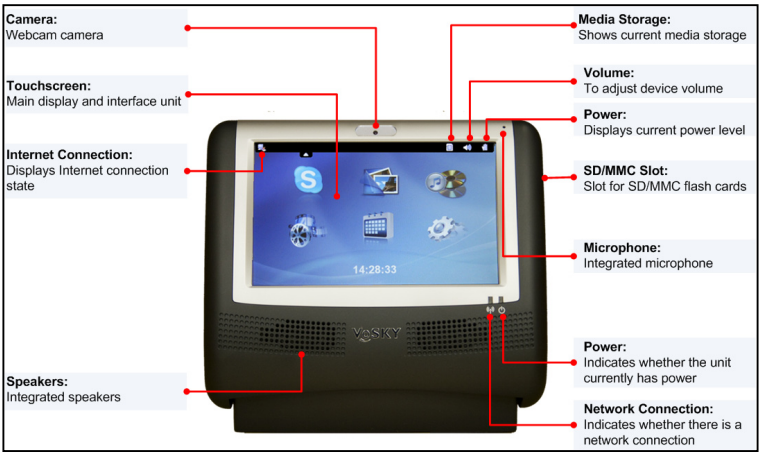

Rear

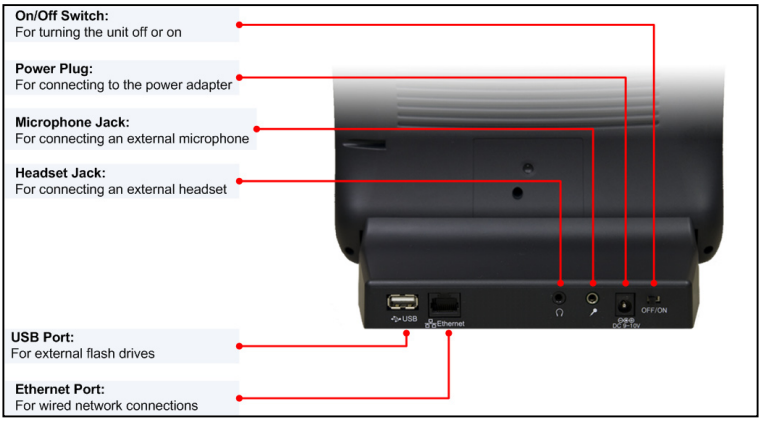

Setting up your MTV

When turning on your Multimedia Touch Screen Videophone for the first time a Setup Wizard will guide you to configuring your device for optimal use. Follow the guidelines below to setup your device.

1. Welcome: Tap **Begin** to continue.

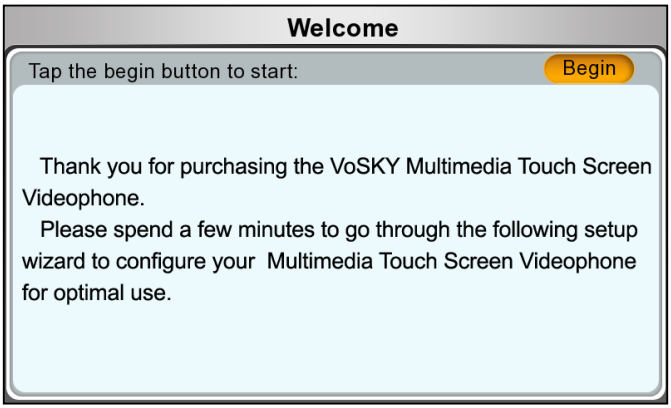
Welcome
Tap the begin button to start:
Begin
Thank you for purchasing the VoSKY Multimedia Touch Screen Videophone.
Please spend a few minutes to go through the following setup wizard to configure your Multimedia Touch Screen Videophone for optimal use.

2. Language selection: Tap on your preferred language to choose it and tap **Next** to continue.

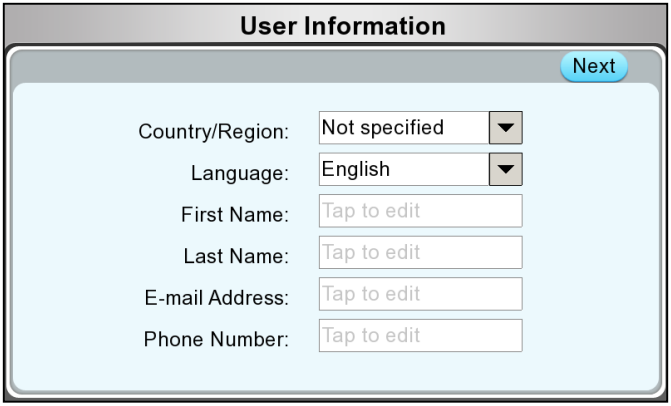

3. Terms of Service: Read the Terms of Service and tap **Agree** to continue.

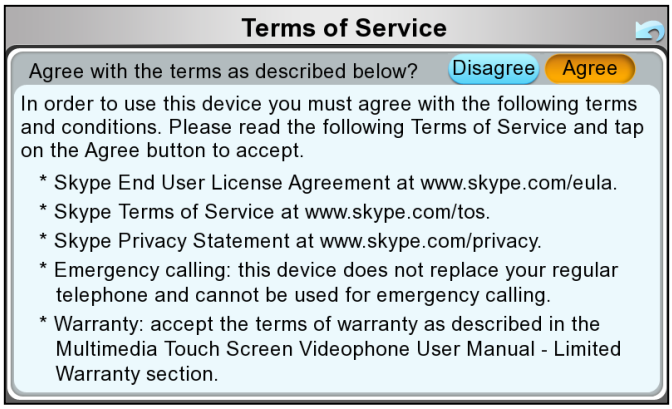
Terms of Service
Agree with the terms as described below?
Disagree
Agree
In order to use this device you must agree with the following terms and conditions. Please read the following Terms of Service and tap on the Agree button to accept.
* Skype End User License Agreement at www.skype.com/eula.
* Skype Terms of Service at www.skype.com/tos.
* Skype Privacy Statement at www.skype.com/privacy.
* Emergency calling: this device does not replace your regular telephone and cannot be used for emergency calling.
* Warranty: accept the terms of warranty as described in the Multimedia Touch Screen Videophone User Manual - Limited Warranty section.

☞ **Note:** You MUST Agree to the Terms of Service to continue and use the device. If you disagree you will remain on this screen and not be able to continue to use the device.

4. Select Resource: Tap on your preferred storage source to choose it and tap **Next** to continue. You may select to use the Internal Memory, an external SD/MMC memory card, or an external USB flash drive.

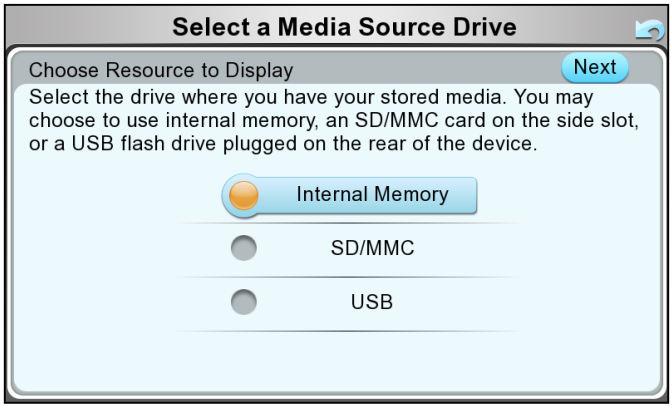
Select a Media Source Drive
Choose Resource to Display
Next
Select the drive where you have your stored media. You may choose to use internal memory, an SD/MMC card on the side slot, or a USB flash drive plugged on the rear of the device.
Internal Memory
SD/MMC
USB

5. Date and Time: Set your region's date and time. Tap the **up/down** arrows for each date/time parameter to set the proper value. Once the date and time values are set, tap **Next** to continue.

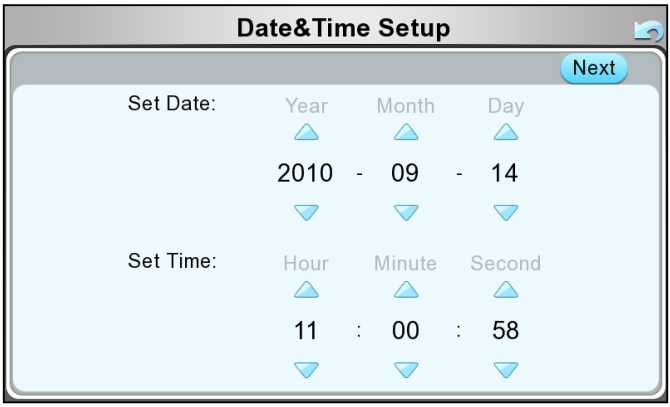

6. Configure Network: Tap **OK** to configure your MTV to connect to the Internet.

Note: You may skip this process by tapping Cancel and going straight to the Home screen.

Warning: If you skip this step, you will need to manually setup your Internet connection through the Settings page. Without an Internet connection you will not be able to use certain features, such as: Skype, Photo Mail, etc.

7. Select Connection Type: Select whether you would like to connect to the Internet through a **Wired** or **Wireless** connection. Tap your preferred method to select it. Tap **Next** to continue.

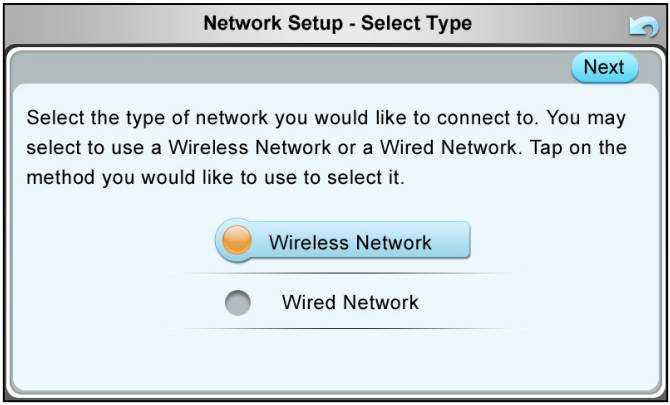
Network Setup - Select Type
Next
Select the type of network you would like to connect to. You may select to use a Wireless Network or a Wired Network. Tap on the method you would like to use to select it.
Wireless Network
Wired Network

☞ **Note:** If you have a wired connection, plug the Ethernet cable to the device and select **Wired Network**. Skip to Step 9.

8. Wireless Connection: If connecting wirelessly, a list of available wireless networks will display. Tap to highlight the one you would like to connect to and tap **Next** to continue.

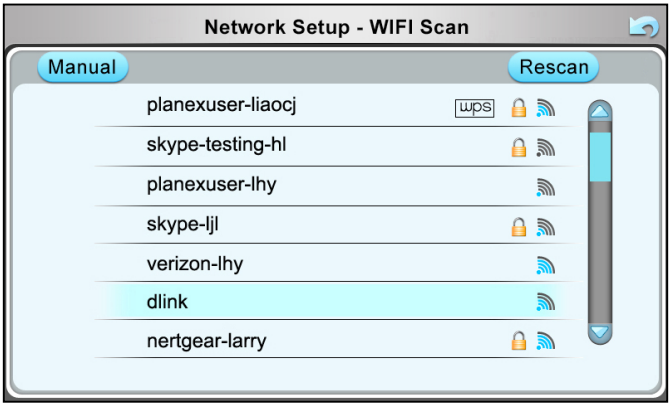

☞ **Note:** If a security password is required, enter it in the following screen.

9. Dynamic or Static IP Address: Select whether to obtain an IP Address automatically or to manually configure an IP address yourself. If manually configuring an IP address, fill in the fields. Tap **Connect** to continue.

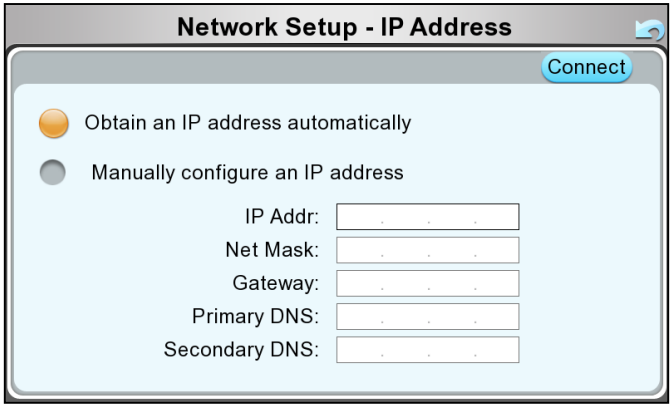

10. Setup Wizard Complete: The following screen will appear once you've completed the setup wizard. Tap **Finish** to exit the setup wizard and go to the Home screen.

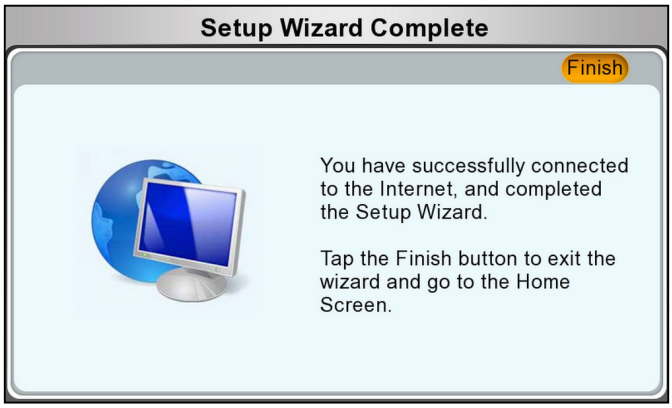
Setup Wizard Complete
Finish
You have successfully connected to the Internet, and completed the Setup Wizard.
Tap the Finish button to exit the wizard and go to the Home Screen.

Using your MTV

Home Screen

Tapping the **Home** icon on the upper left corner of the screen will take you to the Home screen. From this screen you may select which of the following features to access: **Skype**, **Video**, **Music**, **Photos**, **Calendar**, or **Settings**.

Skype

Signing Into Skype

1. From the **Home** screen, tap the **Skype** icon. This will display the Skype Main Menu screen. If this is your first time accessing Skype, you will not see this screen and immediately skip to the following step.

2. If you have not done so, you will need to either **Sign in** to an existing Skype account, or **Create** a new account. Tap the option you would like to select to focus it, and tap again to select it.

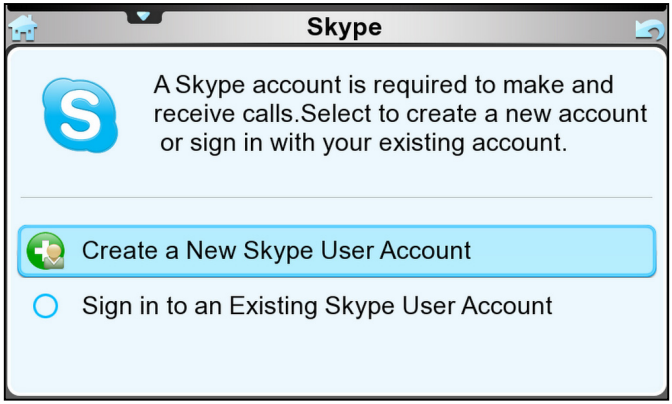
Skype
A Skype account is required to make and receive calls.Select to create a new account or sign in with your existing account.
Create a New Skype User Account
Sign in to an Existing Skype User Account

3. Terms of service: Read the Terms of Service and tap **Accept** to continue.

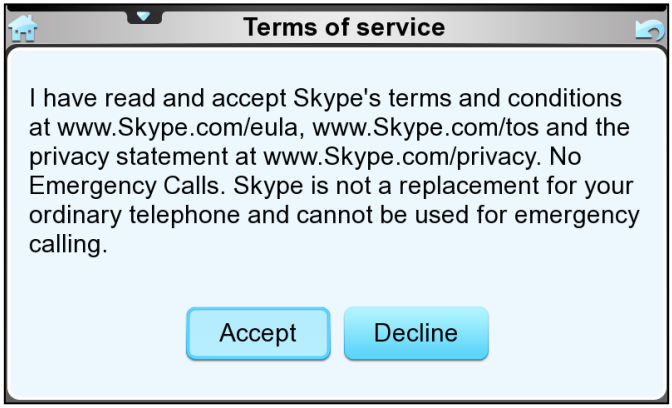
Terms of service
I have read and accept Skype's terms and conditions at www.Skype.com/eula, www.Skype.com/tos and the privacy statement at www.Skype.com/privacy. No Emergency Calls. Skype is not a replacement for your ordinary telephone and cannot be used for emergency calling.
Accept
Decline

4. Creating a new account: If you need to create a new account, tap **Create account**. Enter your **name** and the **Skype Name** you would like to use for your account. Tap **Continue** to go to the next step.

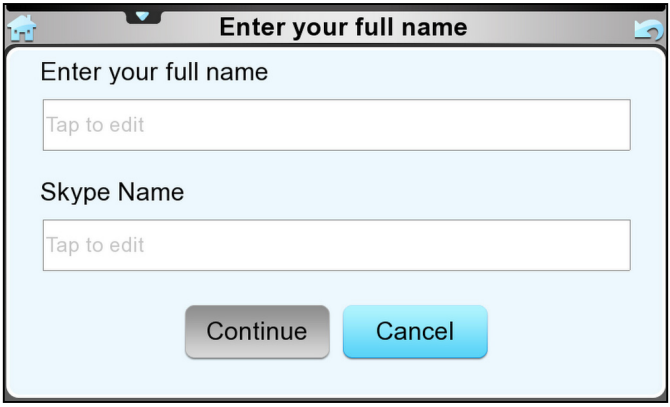

5. Enter your desired **Skype Password** (must contain at least 6 characters). Enter it again for confirmation. Tap **Continue** to go to the next step.

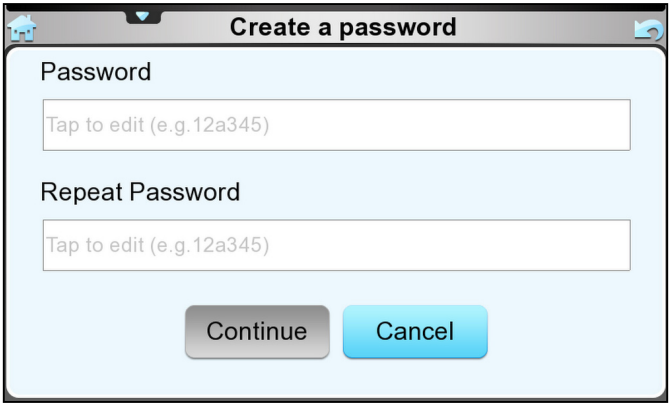

6. Enter a valid **email address**. Tap **Continue** to go to the next step.

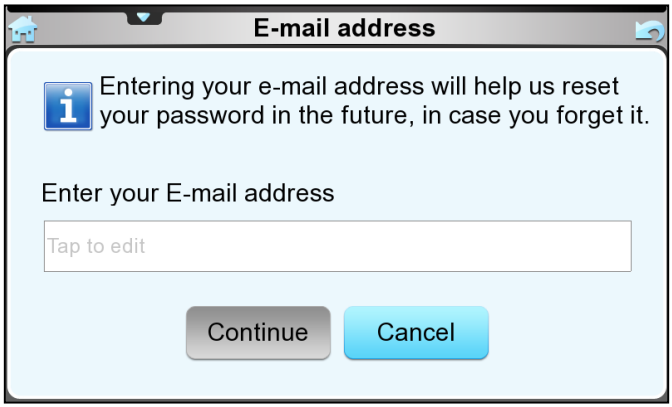
E-mail address
Entering your e-mail address will help us reset your password in the future, in case you forget it.
Enter your E-mail address
Tap to edit
Continue
Cancel

7. Skype account creation complete. Tap **OK** to login to Skype.

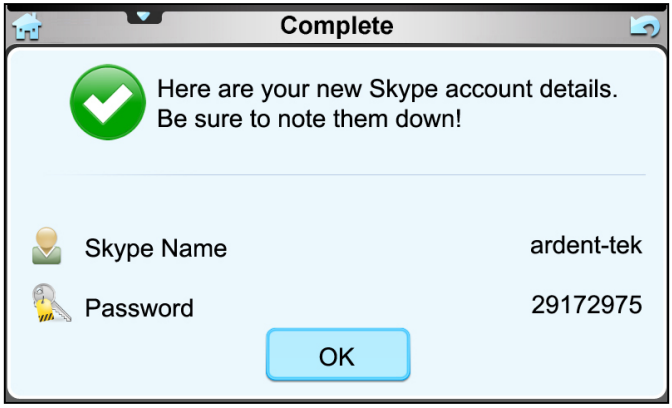

8. Signing into an existing account: If you already have a Skype account you would like to use, select **Sign in to an Existing Skype User Account**.

Skype
A Skype account is required to make and receive calls.Select to create a new account or sign in with your existing account.
Create a New Skype User Account
Sign in to an Existing Skype User Account

9. Enter your **Skype Name** and **Password** in the following screen. Tap **Sign in** to sign into Skype.

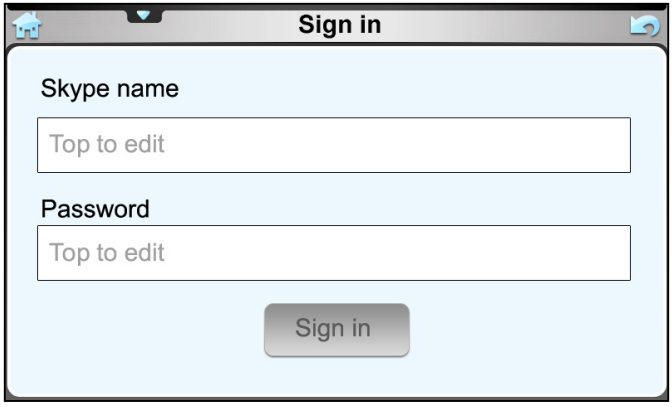

10. You may choose to automatically sign into Skype each time the device starts. Tap on **Yes** to choose to automatically sign into Skype.

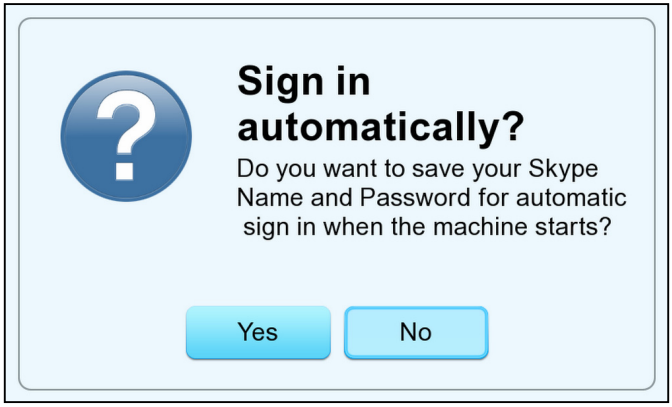
Sign in automatically?
Do you want to save your Skype Name and Password for automatic sign in when the machine starts?
Yes
No

Warning: It may take some time for your contacts to fully download on initial sign in. Please be patient while all your contacts are loading.

Skype Main Menu

You may access all the features of Skype from the Skype Main Menu. Tap on an icon to focus it – it will center on screen – and tap again to select it. You may also drag your finger across the screen left or right to move, and focus, other menu options. The available options are: **Settings**, **Search**, **Add contact**, **Call phones**, **Contacts**, **History**, **Status**, **See myself**, and **Account**.

Viewing Contacts

1. From the Skype Main Menu screen, tap **Contacts** if it isn't already in focus. Tap again to select it.

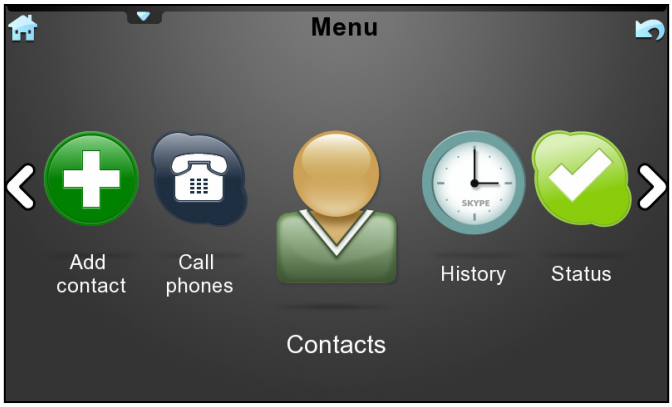

2. Use the **left/right arrows**, or **drag your finger across the screen** to the left or right, to scroll through the contacts. Tap the contact in focus to select it.

☞ **Note:** Your contacts will be sorted alphabetically. You can quickly jump to your contact by tapping one of the tab letter groups on the bottom of the screen.

3. A list of available actions is displayed on the bottom right of the screen. Tap an action to perform it. The following actions are available: **Video Call**, **Voice Call**, **View Profile**, **Rename**, **Remove**, and **Block**.

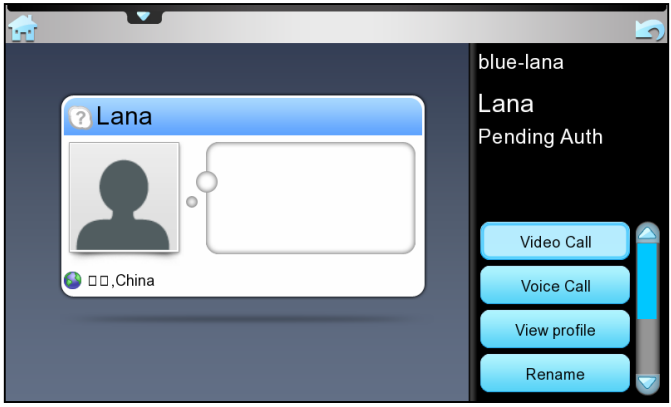

Adding a Contact

1. From the Skype Main Menu screen, tap **Add contact** if it isn't already in focus. Tap again to select it.

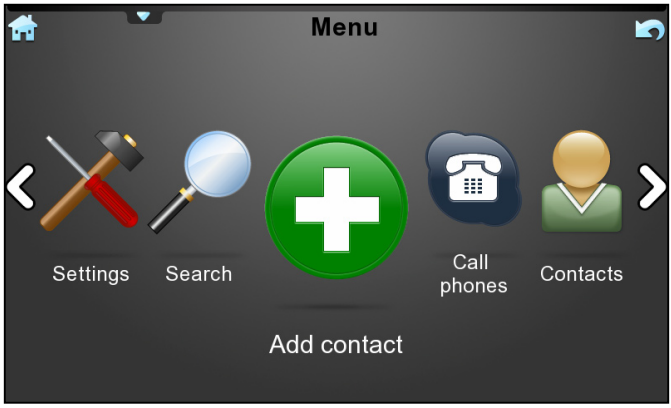

2. Select to **Add a Skype Contact** or to **Add a telephone number.**

3. Enter the **Skype ID** of the contact you would like to add. MTV will search for names that match the search term. Tap **Search** to continue.

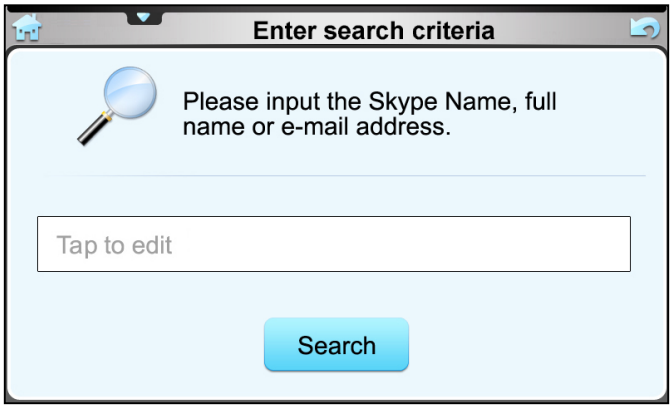

4. A list of matching Skype IDs will appear. Tap the contact you would like to add from the list.

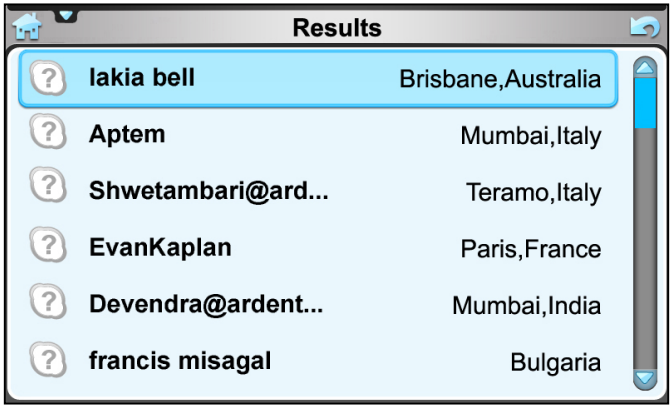

5. Tap **Add contact** to add the selected contact to your contact list.

Skype Settings

1. From the Skype Main Menu screen, tap **Settings** if it isn't already in focus. Tap again to select it.

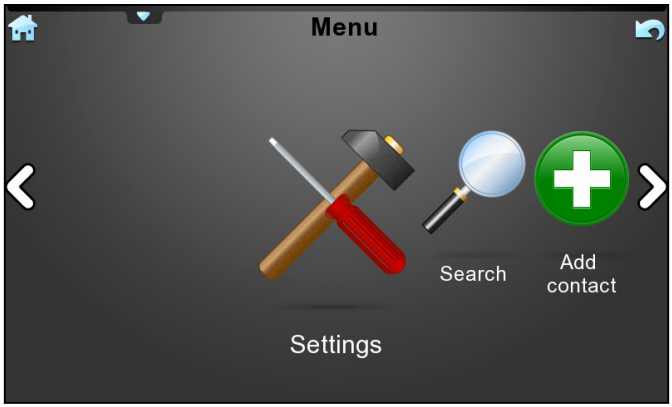

2. Select the setting you would like to modify from the list. Settings are available for: **Video**, **Sound**, **Profile**, **Calls, Privacy**, and **Advanced**. Select an option and follow the onscreen instructions to configure your settings.

- Video: configures the webcam and video display for Skype video calls
- Sound: select ring tones and sound notifications
- Profile: modify your personal profile
- Calls: modify your call options including call forwarding options
- Privacy: set privacy settings and blocked users
- Advanced: set advanced options

Skype Video Options

1. From the Skype Main Menu screen, go to **Settings** → **Video**. You may choose whether to start your video automatically when placing a call, who to automatically receive video from, and who is notified that you have video. Tap on each item to configure it.

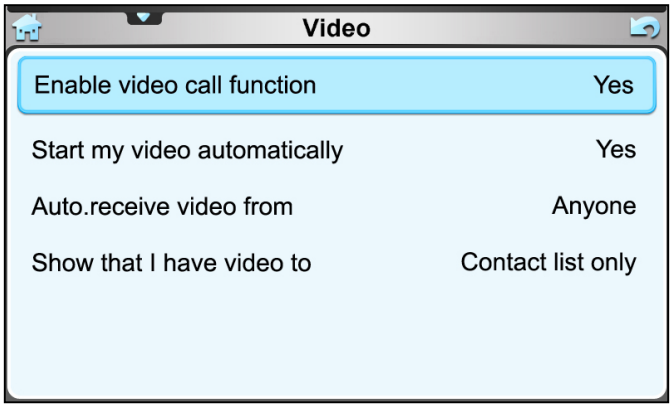

2. From the Video Settings screen, tap on **Auto receive video from** to select who you would like to automatically receive video from on video calls. You may select from the following

   - Anyone I allow to call me: receive video from anyone who can call you
   - People in my Contacts list: receive video only from contacts who are also on your list
   - No one: do not automatically receive video from anyone

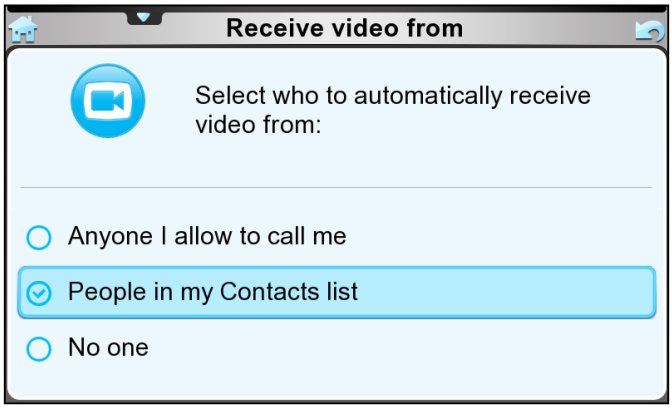
Receive video from
Select who to automatically receive video from:
Anyone I allow to call me
People in my Contacts list
No one

3. From the Video Settings screen, tap on **Show that I have video to** select who to notify that you have a video camera. You may select from the following:

   - People in my Contacts list: show only contacts who are on your contact list
   - No one: do not show anyone that you have a video camera

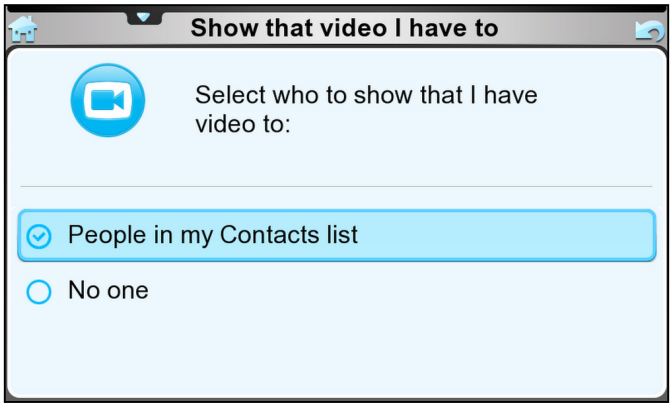

History

1. From the Skype Main Menu screen, tap **History** if it isn't already in focus. Tap again to select it.

2. Select an option from the list to display the respective event. You may select to view **All calls**, **Missed calls**, **Incoming calls**, **Outgoing calls**, or **Authorization requests**. The number of new instances for a particular event is displayed to the right.

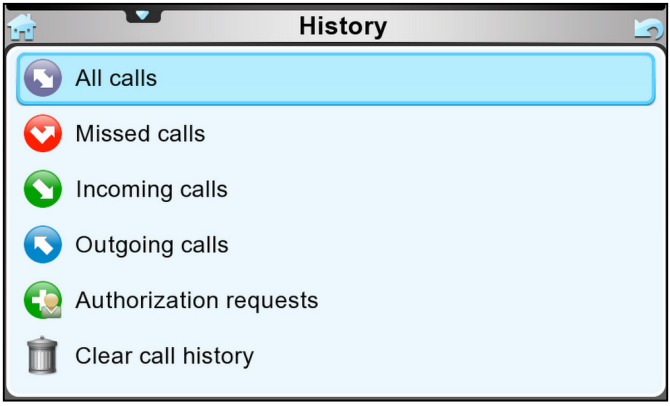

Set Status

1. From the Skype Main Menu screen, tap **Status** if it isn't already in focus. Tap again to select it.

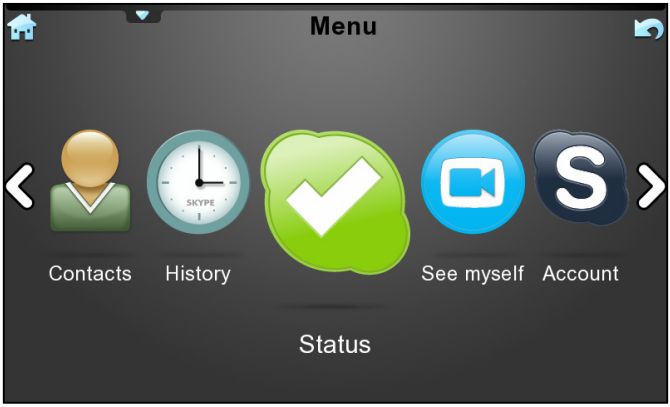

2. A list of available status will display. Your current status will be highlighted. Tap a status to select and set it as your current status.

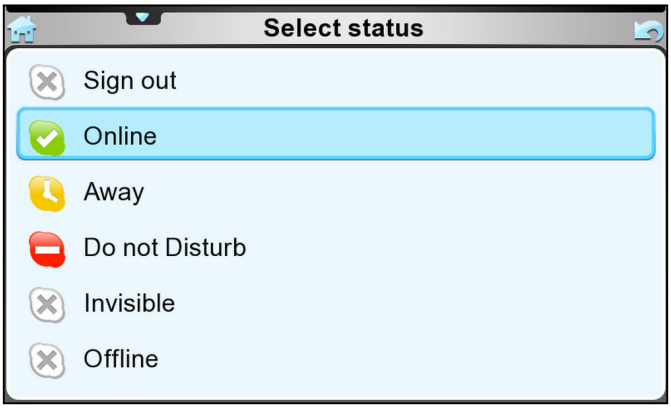

Note: You may also tap **Sign Out** to sign out of Skype. Signing out will bring you back to the Skype login screen.

Warning: Signing out of Skype manually will disable the automatic sign in feature. You must sign in manually on the next system reboot.

See Myself

1. From the Skype Main Menu screen, tap **See myself** if it isn't already in focus. Tap again to select it.

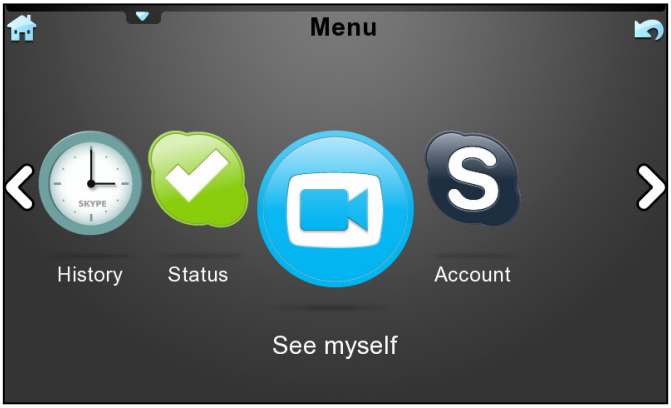

2. Tap on **Snapshot** to take a photo snapshot from the camera. The camera video feed will be displayed on the screen. Tap on **Snapshot** to take the photo snapshot. Tap **Cancel** to return to the previous menu.

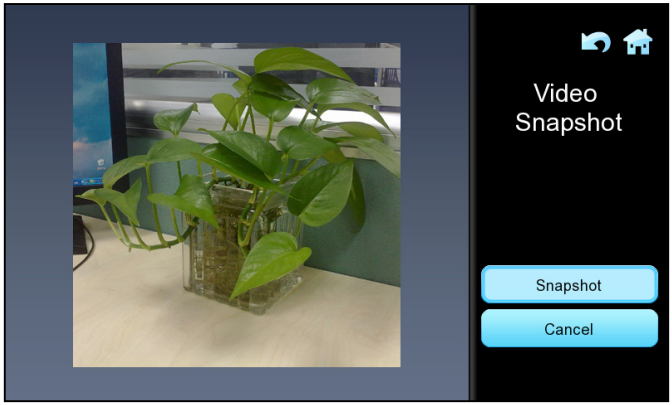

3. Once a snapshot is taken, tap on **Save** to save it as your Skype profile picture. Tap **Try again** to retake the snapshot. Tap **Cancel** to return to the previous menu.

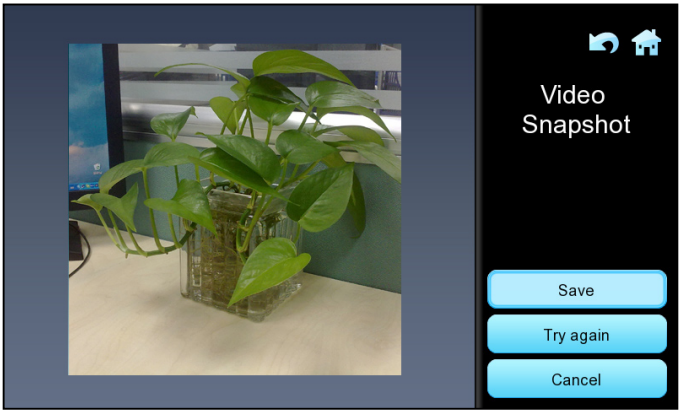

4. From the main See myself menu, tap on **Brightness** to adjust the video brightness level. Adjust the slider left/right to adjust the brightness level. Tap **Ok** when finished.

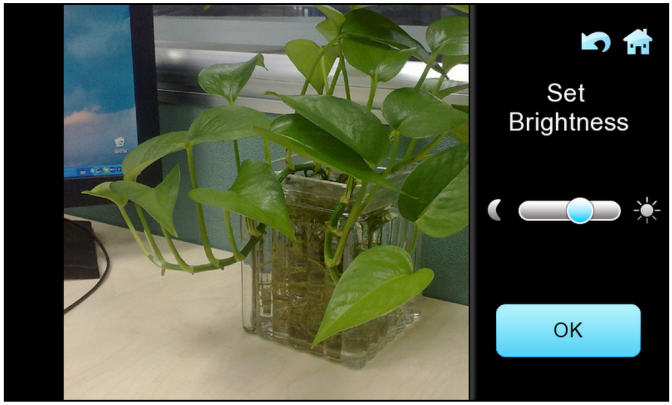

5. From the main See myself menu, tap on **Advanced** to go to the advanced video adjustment settings. There are several video adjustment parameters that can be configured: **Contract**, **Saturation**, **Sharpness**, and **Hue.** Tap on each parameter to adjust the appropriate setting.

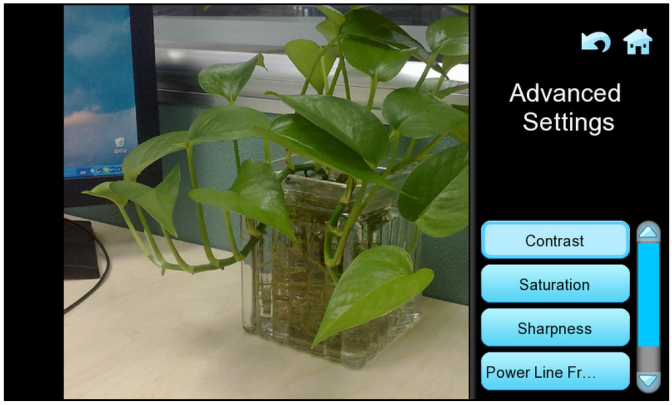

6. Tap on **Power Line Frequency** to select the value based on your region's power line settings.

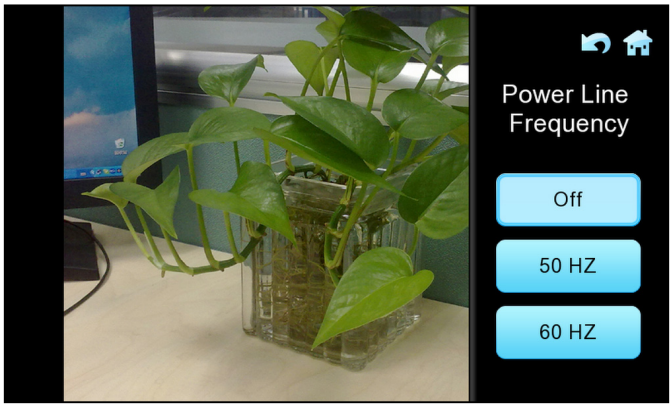

7. Tap on **Reset to default settings** to reset all Advanced parameters to their default values. Click **Yes** to confirm the reset or click **No** to return to the previous screen.

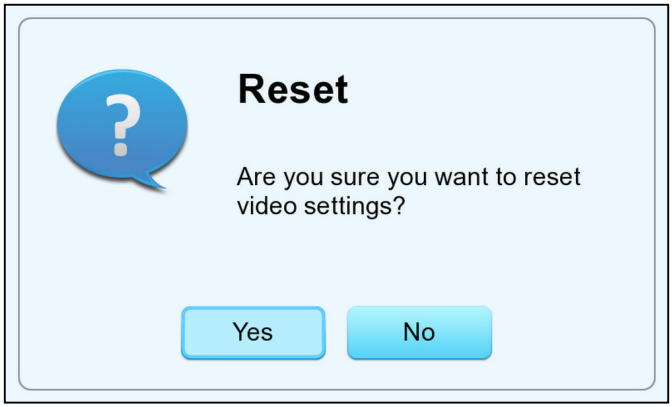

Account Info

1. From the Skype Main Menu screen, tap **Account** if it isn't already in focus. Tap again to select it.

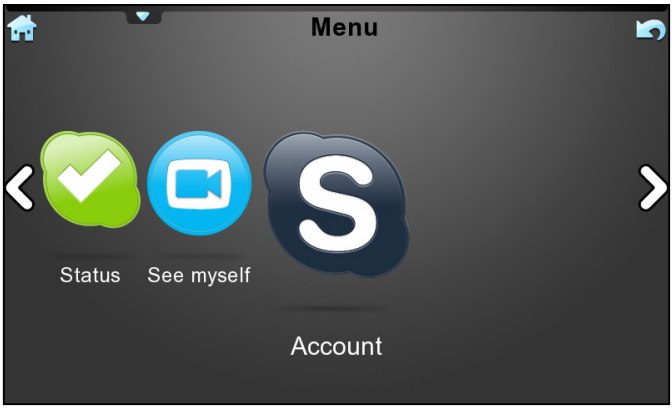

2. The following screen will display information about your account: **SkypeOut**, **Online number, Skype Voicemail**, and **Change password**. Tap any one of the list items to display more info about the selection.

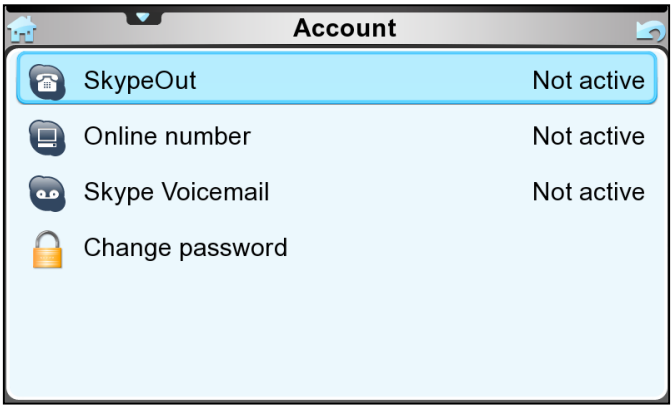

3. Tap **Change password** to change the password to the current Skype account.

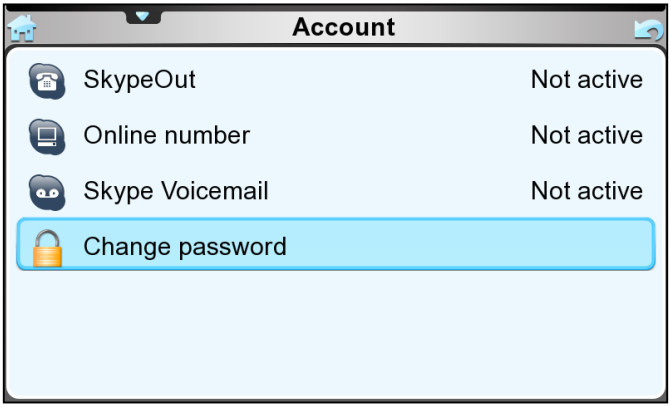

4. Enter your current password. Tap **Continue** to go to the next step.

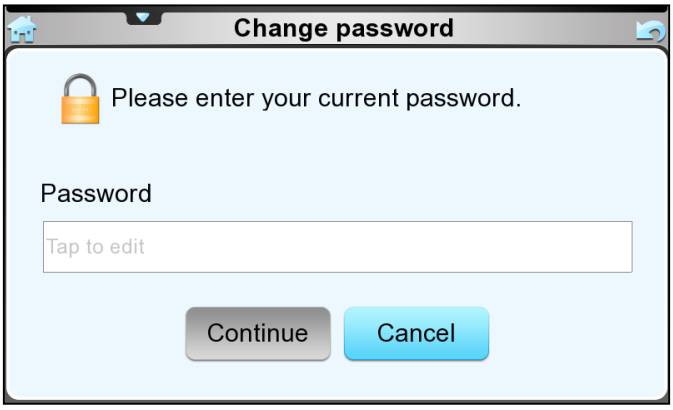

5. Enter a new password. Tap **Continue** to change your password.

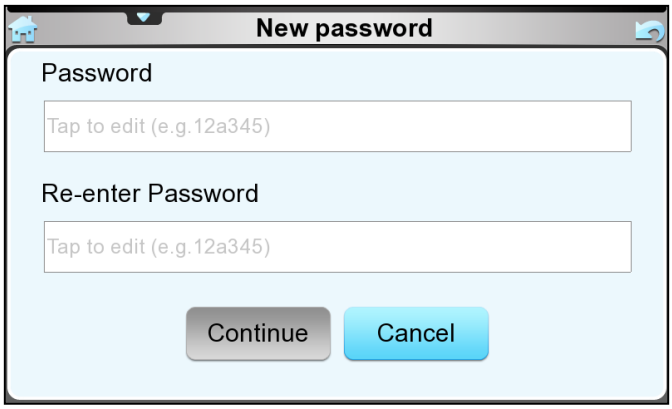

Calls

Placing Skype Calls

1. From the Skype Main Menu screen, tap **Contacts** if it isn't already in focus. Tap again to select it.

2. Use the **left/right arrows**, or **drag your finger across the screen** to the left or right, to scroll to the contact you would like to call. Tap the contact in focus to continue.

☞ **Note:** Your contacts will be sorted alphabetically. You can quickly jump to your contact by tapping one of the tab letter groups on the bottom of the screen

3. On the following screen, tap the **Video Call** button to place a Skype video call to the selected contact. Tap **Voice Call** if you would like to make a regular (no video) call to the selected contact.

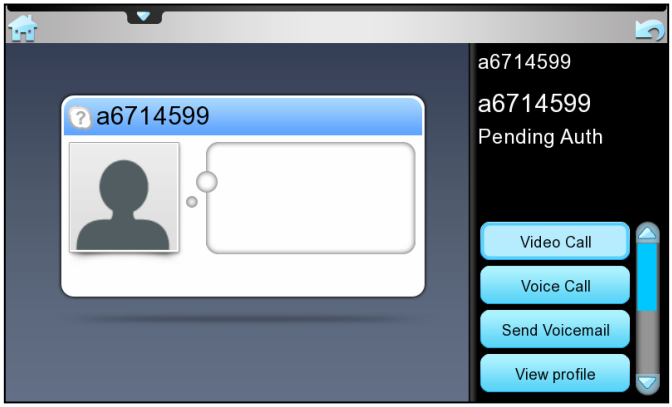

4. The call screen will appear when the call is placed. Tap the **Start/Stop my video** button to start/stop your video stream. Press the **Volume** button to adjust the speaker volume level. Tap the **Microphone mute** during the call to mute the microphone. Tap the icon to terminate the call.

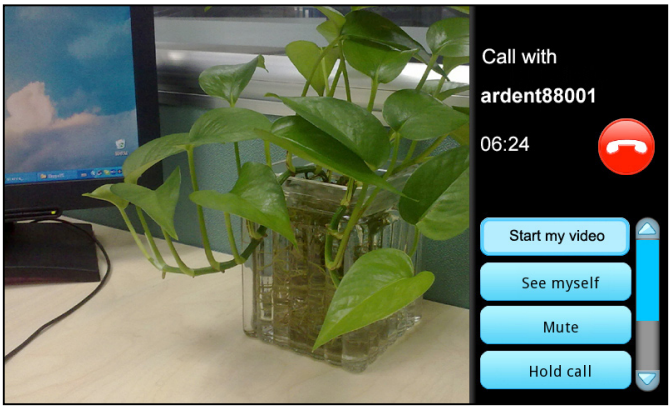

☞ **Note:** The menu will automatically hide if you don't press on the screen for several seconds. This will reveal the full screen video. Tap anywhere on the screen to unhide the menu.

Calling Mobile or Landline Numbers

1. From the Skype Main Menu screen, tap **Call phones** if it isn't already in focus. Tap again to select it.

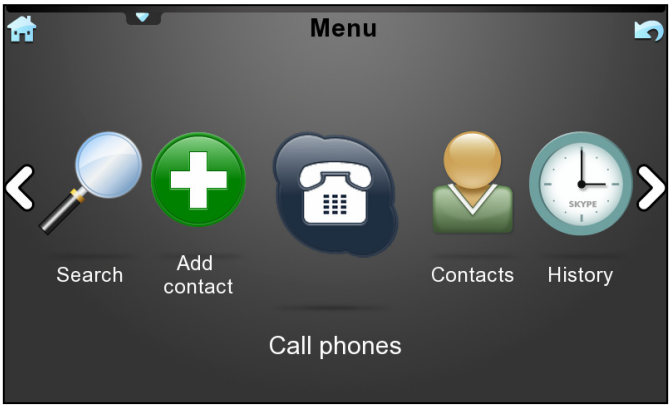

2. Enter the phone number you would like to call. Tap the **call button** to place the call.

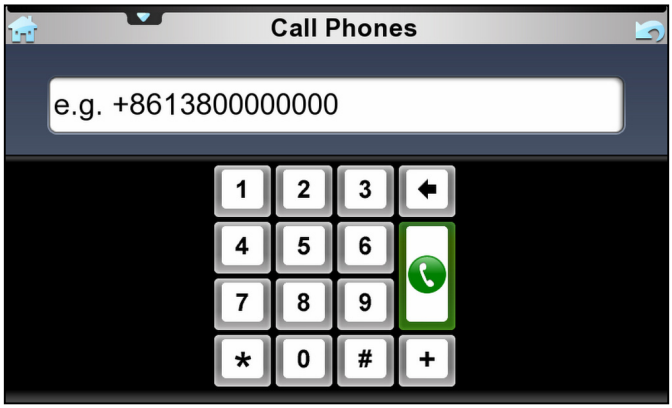

☞ **Note:** Use the following formats to dial a phone number: Domestic call: area code + phone number.
International call: "+" + country code + area code + phone number

Example: To dial the number 1 (408) 555-1234, tap the following:
Domestic (US resident): 4085551234
International (from outside US): +14085551234

3. The call screen will appear when the call is placed. Tap the **Mute button** during the call to mute the microphone. Drag the **volume slider** left/right to adjust the speaker volume. Tap the icon to terminate the call.

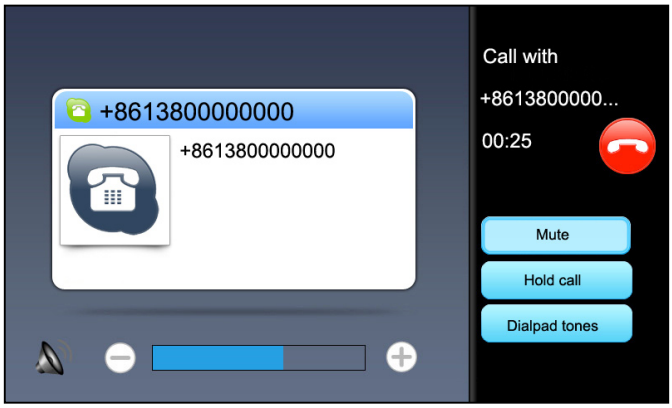

Receiving and Answering Calls

1. When a call comes in, the incoming call window will appear on the screen. Tap **Answer** to take the call without video. Tap **Answer with Video** to answer it and automatically start your video. Tap **Decline** to reject the call and return to your original screen.

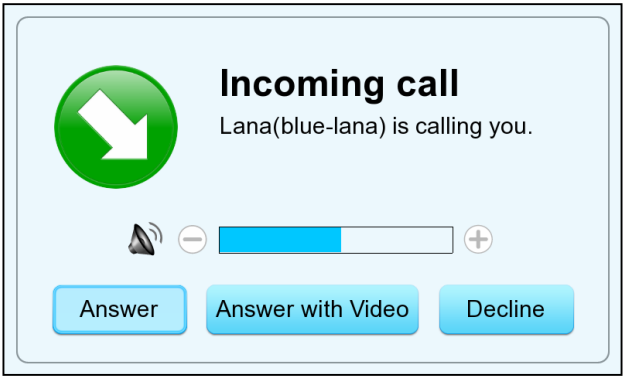

☞ **Note:** The incoming call screen will interrupt any current action. You will return to your previous screen once the call has ended. Music and photo slideshows will pause and restart automatically. Videos will stop and will return to the video list page.

2. The call screen will appear when the call is placed. Tap the **Start/Stop my video** button to start/stop your video stream. Press the **Volume** button to adjust the speaker volume level. Tap the **Mute** button during the call to mute the microphone. Tap the icon to terminate the call.

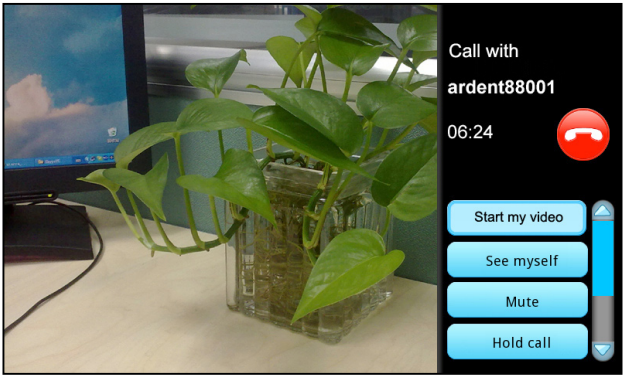

☞ **Note:** The menu will automatically hide if you don't press on the screen for several seconds. This will reveal the full screen video. Tap anywhere on the screen to unhide the menu.

Call Screen Options

1. During a Skype call the following options are available to you: **Stop/Star my video, Volume, Mute, Hold call, Dialpad tones,** and **View Profile.**

   - Start/Stop my video: starts/stop the webcam video feed during a call
   - Volume: adjusts the speaker volume level
   - Mute: mutes the microphone
   - Hold call: places the current call on hold
   - Dialpad tones: brings up a phone dialpad to send DTMF tones
   - View Profile: view the contact's profile

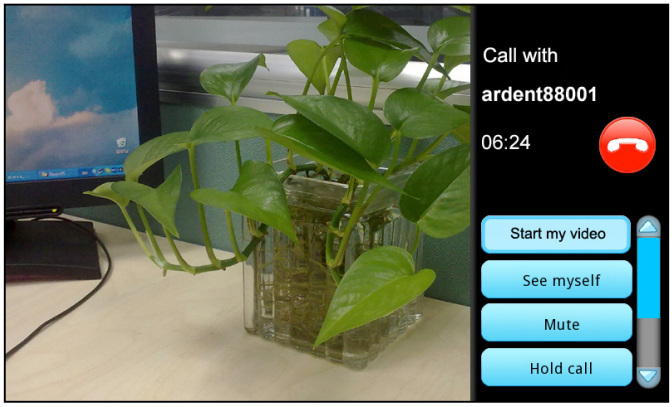

2. During a SkypeOut call the following options are available to you: **Mute**, **Hold** call, **Dialpad tones**.

   - Mute: mutes the microphone
   - Hold call: places the current call on hold
   - Dialpad tones: brings up a phone dialpad to send DTMF tones

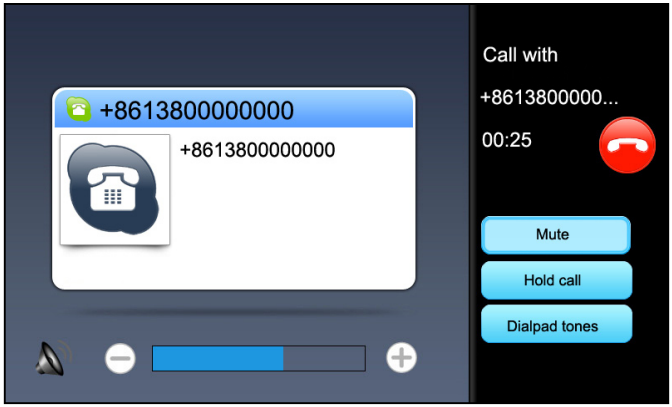

Missed Calls

1. If you receive a call while away, you will see a screen similar to below. The Missed Call screen will display information on who called you while away. Tap on the **Call Back** button to place a call to the contact. Tap **Dismiss** to close the screen.

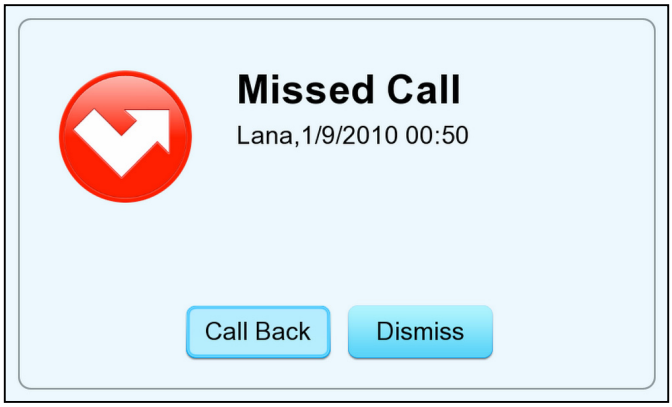

2. If you have any missed events, you will see your History icon change to the one seen below. This indicates that you have missed calls that you have not viewed. Tap on the History icon to list the call history and view the missed calls.

Video

Video Selection

From the **Home** screen, tap the **Video** icon. MTV will scan your source drive for all available video files. Each video will be listed as a thumbnail. The filename of the currently selected video will display on the bottom of the screen. Tap a thumbnail to select it. Tap it again to begin video playback.

Video Playback

Videos play back in full screen. Tap anywhere on the screen to display the overlay video controls. The following functions are available: **play/pause**, **stop, pervious video**, **next video**, **mute speaker**, **volume down**, **volume up**. Stopping the video will return you to the video selection screen.

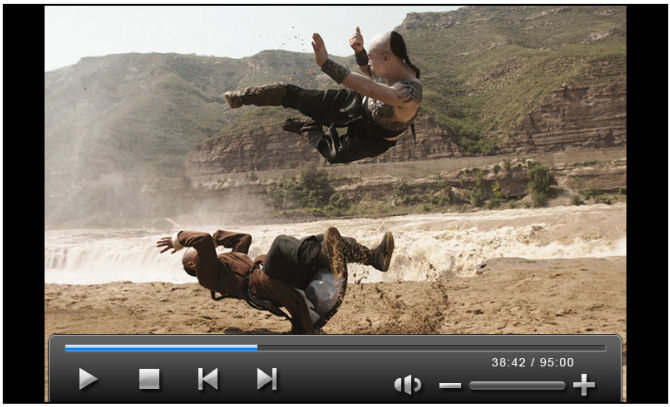

Video Menu

The video menu is accessed by tapping the **Menu** button on the lower left corner of the Video Selection screen. From the Menu, you may select one of the following operations: **Set Mode**, **Copy**, and **Delete**.

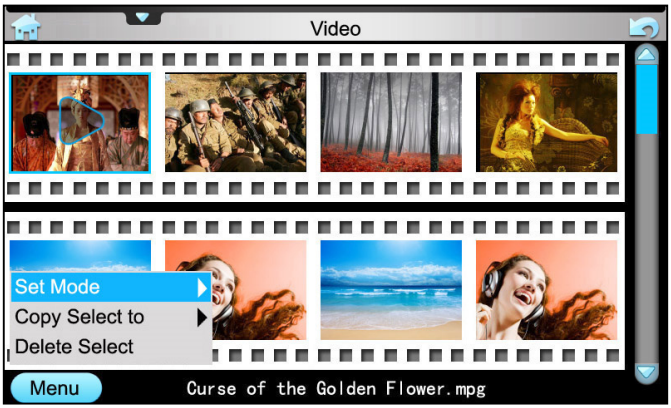

- Set Mode: sets the playback mode. You can choose to **Repeat All**, **Repeat Off**, **Repeat One** (repeats only the selected video), and **Random**.
- Copy: copies the currently selected video to another location
- Delete: deletes the currently selected video

Music – Local Media

Music Selection

From the **Home** screen, tap the **Music** icon. MTV will scan your source drive for all available music files. Each music file will be listed as a thumbnail, with the filename directly below it. The song title, artist, and file size will display on the bottom of the screen. Tap a thumbnail to select it, and tap again to begin playing.

Music Playback

The music playback screen displays when a song is played. Tapping on the progress bar on the bottom of the page lets you rewind/fast forward to any part of the song. The following functions are available: **play/pause**, **stop, previous song**, **next song**, **mute speaker, volume down**, **volume up**. The left side of the page will display the song's **album art** (if available). The right side displays information about the song, including: **filename**, **song title**, **artist**, and **album**.

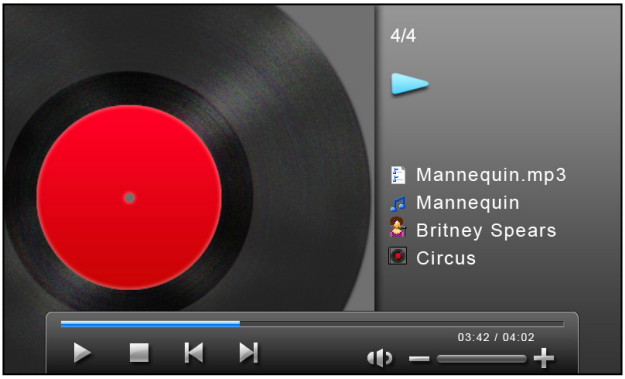

Music Menu

The music menu is accessed by tapping the **Menu** button on the lower left corner of the Music Selection screen. From the Menu, you may select one of the following operations: **Set Mode**, **Copy**, and **Delete**.

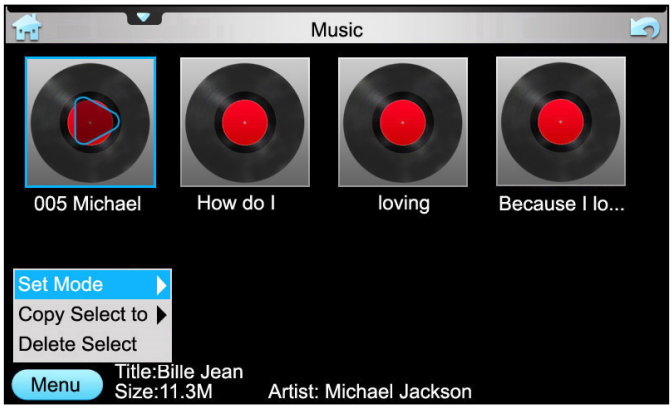

- Set Mode: sets the playback mode. You can choose to Repeat All, Repeat Off, Repeat One (repeats only the selected song), and Random.
- Copy: copies the currently selected music file to another location
- Delete: deletes the currently selected music file

SHOUTcast™ Radio

What is SHOUTcast™ Radio?

The SHOUTcast™ Radio Directory is one of the largest directories of professionally and community programmed online radio stations in the world. Today SHOUTcast™ Radio features over 32,000 stations from around the globe. If you're into popular or indie music, or want to check out local or world programming, you're sure to find something you like on SHOUTcast™ Radio.

SHOUTcast™ Radio also provides audio broadcasting software tools for those who want to create a radio station. It permits anyone on the internet to broadcast audio from their computer to listeners across the Internet or any other IP-based network (Office LANs, college campuses, etc…).

Powered by

SHOUTcast™ Radio

Station Selection

From the **Home** screen, tap the **Music** icon, then tap the **SHOUTcast™** Radio icon. The following screen will display the current most popular stations. Use the scrollbar to view the current list. Use the left/right arrows to view more stations. Tap on a station to highlight it, and tap again to begin streaming the selected station.

SHOUTcast (TM) Radio - Top Stations
Search for Station,Genre
Search
1
Station: Alex Jones - Infowars.com
Now Playing: Replay - Hr 1 (PrisonPlanet.com)
2
Station: TOP 100 ReaLCasT
Now Playing: - I Need a Girl (feat. G-dragon)
3
Station: .977 The Hitz Channel - 977MUSIC.COM - The ...
Now Playing: Taylor Swift - Mine
4
Station: ..:: French Kiss FM ::..
Now Playing: Playlist on http://www.frenchkissfm.com
5
Station: Groove Salad: a nicely chilled plate of ambient ...
Now Playing: Stargarden (Bobby D) - Ghosts Of Ocean Gardens
Popular
Recent
Advanced
Now Playing
Stations: 1-20 of 100

Quick Search

Tap on the **search bar** and enter keyword(s) to search for in the SHOUTcast™ Radio directory. Tap on the **Search** button to perform the search. The results will be listed. You may also tap on the **Popular** or **Recent** buttons on the lower right of the screen to quickly filter through the station directory. Popular will sort the stations and list the most popular first. Recent will list the stations you have most recently listened to.

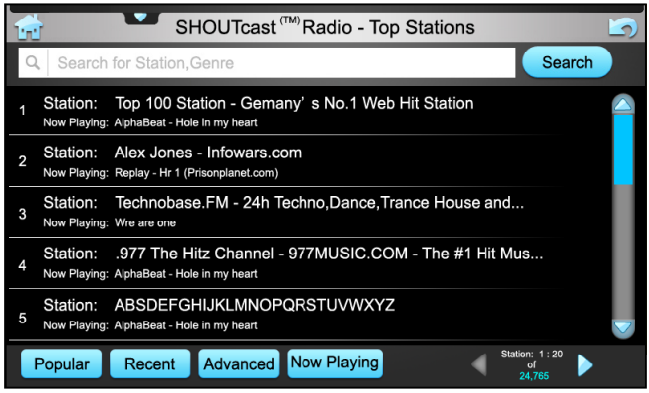
SHOUTcast (TM) Radio - Top Stations
Search for Station,Genre
Search
1 Station: Top 100 Station - Gemany' s No.1 Web Hit Station
Now Playing: AlphaBeat - Hole In my heart
2 Station: Alex Jones - Infowars.com
Now Playing: Replay - Hr 1 (Prisonplanet.com)
3 Station: Technobase.FM - 24h Techno,Dance,Trance House and...
Now Playing: We are one
4 Station: .977 The Hitz Channel - 977MUSIC.COM - The #1 Hit Mus...
Now Playing: AlphaBeat - Hole in my heart
5 Station: ABSDEFGHIJKLMNOPQRSTUVWXYZ
Now Playing: AlphaBeat - Hole in my heart
Popular
Recent
Advanced
Now Playing
Station: 1 : 20
of
24,765

Advanced Search

Tap **Advanced** to perform an advanced search. Tap a **genre** to select it. Tap again to view, and select, any **sub-genres**. Select a **bitrate** to display stations that stream at the selected bitrate or higher. Tap on **Go** to display the stations that match the genre/bitrate selections. You may also tap on the Search bar to enter a keyword(s) to further filter out the results. Tap the **Search** button to perform a keyword(s)/genre/and bitrate search. Tap the **Reset Filters** button to clear your selections.

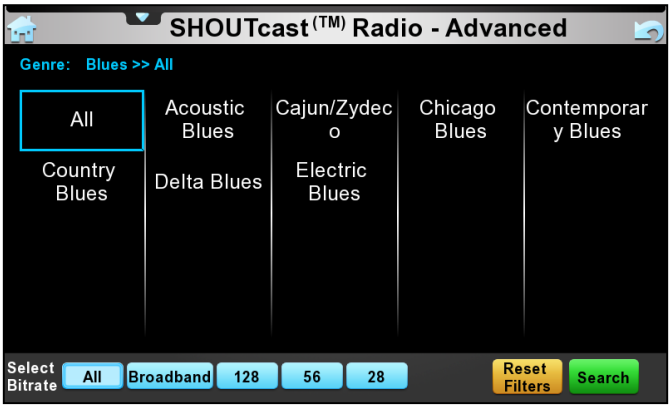

Station Playback

Once a station is selected the **Playback** screen will appear. The media control buttons will appear on the bottom of the screen. Information about the current station will be displayed. The following actions are available:

- **Pause/Play**: press to pause/resume the stream
- **Stop**: stops the stream and returns to the station list screen
- **Previous/Next**: plays the previous/next station based on the current station list
- **Information**: displays further information on the current station.
- **Mute/Unmute**: mutes/unmutes the audio
- **Volume**: adjusts the volume level

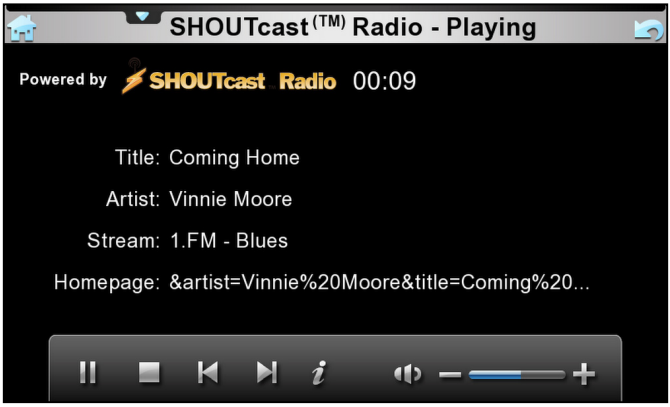

Photos – Local Media

Local Photo Selection

From the **Home** screen, tap the **Photo** icon, then select **Photo Library**. MTV will scan your source drive for all photo/picture files. Each photo will be listed as a thumbnail, with the filename directly below it. Tap a thumbnail to select it. Tap it again to open it.

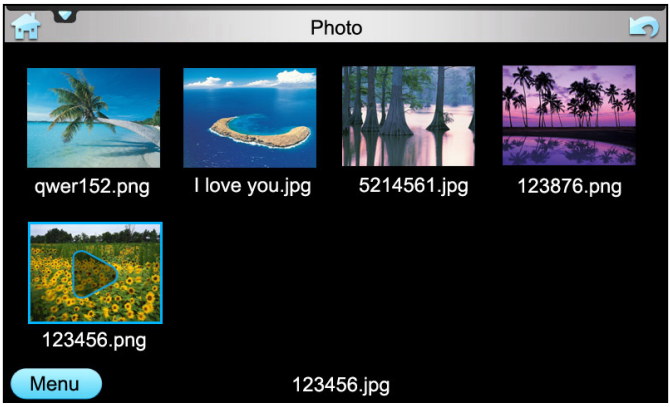

Local Photo Viewing

1. Photos display in full screen. Tap on the **left/right arrows** on the bottom of the screen to go to the previous/next image.

2. Tap anywhere on the screen to display the overlay menu. The following functions are available: **zoom in/out**, **rotate image**, **scale to best fit**, **slideshow**, **picture details**, **send by mail**, **music playback**, and **exit**. Tap **Slideshow** to view all photos in a slideshow.

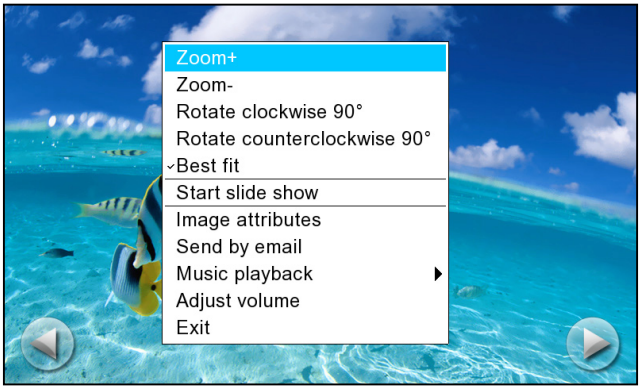

Local Photo Menu

The photo menu is accessed by tapping the **Menu** button on the lower left corner of the Local Photo Selection screen. From the Menu, you may select one of the following operations: **Copy (selected/all)**, **Delete (selected/all)**, **Slideshow Duration**, **Background**, and **Rename**.

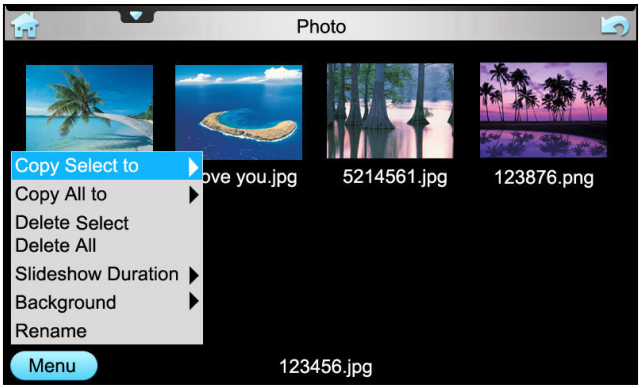

- Copy Selected/All: copy one or all files from one source to another
- Delete Selected/All: deletes one or all files from the current source
- Slideshow Duration: set the time between slideshow transitions
- Background: set the selected photo as the device background
- Rename: rename a photo file

FrameChannel

Configuration

1. From the **Home** screen, tap the **Photo** icon, then select **FrameChannel**.

2. A screen will appear with your FrameChannel Activation Code. Note down this code and do not tap the screen until you have completed the activation. If you exit this screen accidentally, just select FrameChannel again to see your activation code.

FrameChannel - Activation Code
framechannel
Join FrameChannel for free and choose from hundreds of additional free channels, such as news, local weather, sports scores and more.
Your activation code is:
42VDA
www.framechannel.com

3. From a PC browser, go to http://www.framechannel.com.

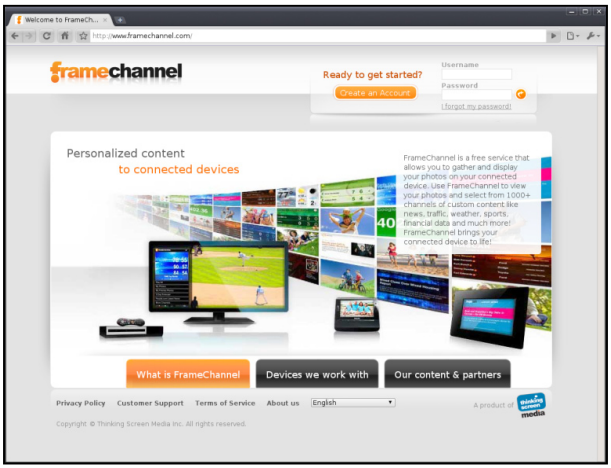
framechannel
Ready to get started?
Create an Account
Username
Password
Forgot my password!
Personalized content
to connected devices
FrameChannel is a free service that allows you to gather and display your photos on your connected device. Use FrameChannel to view your photos and select from 1000+ channels of custom content like news, traffic, weather, sports, financial data and much more! FrameChannel brings your connected device to life!
What is FrameChannel
Devices we work with
Our content & partners
Privacy Policy
Customer Support
Terms of Service
About us
English
A product of
Copyright © Thinking Screen Media Inc. All rights reserved.

4. Enter in the activation code from your device and fill out the remaining fields. Click on **Sign Up** to continue.

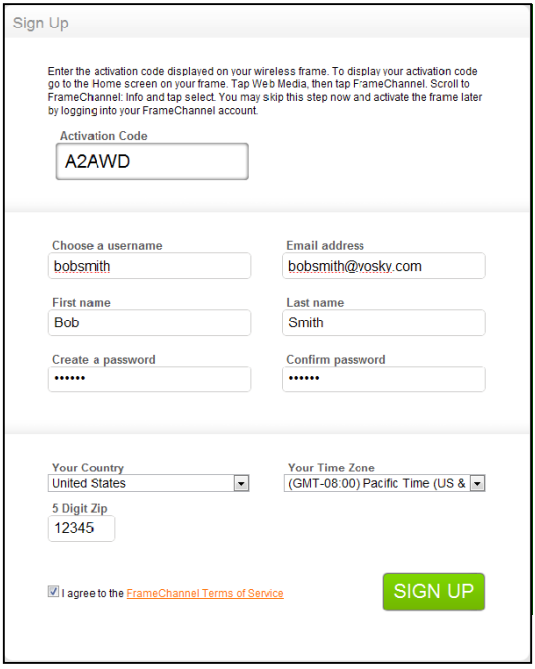
Sign Up
Enter the activation code displayed on your wireless frame. To display your activation code go to the Home screen on your frame. Tap Web Media, then tap FrameChannel. Scroll to FrameChannel: Info and tap select. You may skip this step now and activate the frame later by logging into your FrameChannel account.
Activation Code
A2AWD
Choose a username
bobsmith
Email address
bobsmith@yosky.com
First name
Bob
Last name
Smith
Create a password
Confirm password
Your Country
United States
Your Time Zone
(GMT-08:00) Pacific Time (US &
5 Digit Zip
12345
I agree to the FrameChannel Terms of Service
SIGN UP

5. Once activated, you will be able to setup your channels through framechannel.com. Once you have completed selecting and configuring your channels, return to the MTV and tap the screen to view your channels.

FrameChannel - Activation Code
framechannel
Join FrameChannel for free and choose from hundreds of additional free channels, such as news, local weather, sports scores and more.
Your activation code is:
42VDA
www.framechannel.com

Viewing Channels

1. From the **Home** screen, tap the **Photo** icon, then select **FrameChannel**.

2. A list of your available channels will appear. Tap on a channel to view photos from that channel.

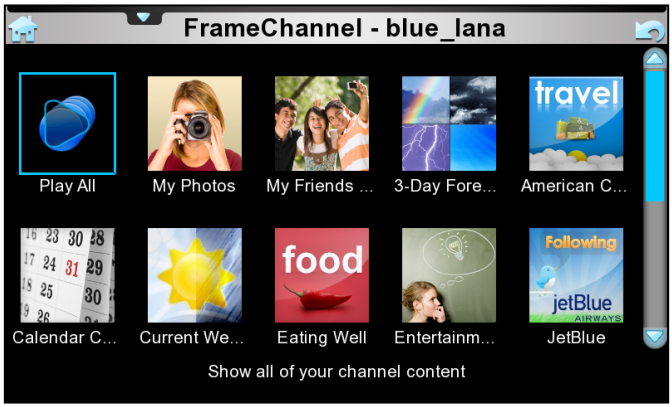

3. The photo slideshow will automatically begin. Tap on the screen to display the photo control panel.

- **Stop**: stops the slideshow and returns to the channels screen
- **Previous**: tap to go back to the previous photo.
- **Play**: resume timer and slideshow
- **Next**: displays next photo.
- **Thumbnails**: tap to stop slideshow and display a thumbnail list of all photos in the channel

FrameChannel Menu Options

1. While in photo thumbnail view, tap on the Menu button to display the menu options:

   - **Copy selected to**: copies the currently selected photo to a specified location
   - **Copy all to**: copies all the photos in the channel to a specified location
   - **Slideshow Duration**: select the duration between photo transitions during the slideshow
   - **Background**: sets the currently highlighted photo as the unit background

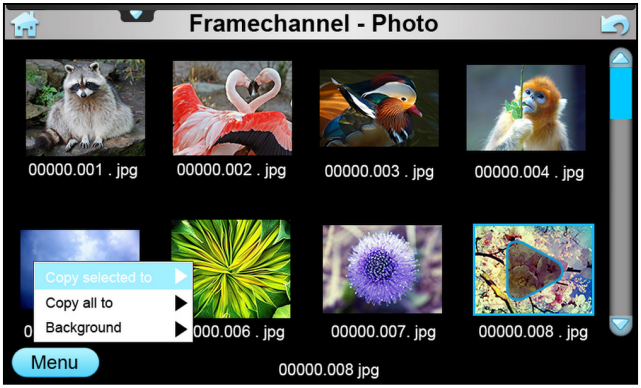

Photo Mail

Configuration

1. From the **Home** screen, tap the **Photo** icon, then select **Photo Mail**.

2. Tap the **Back** button to cancel the sync process.

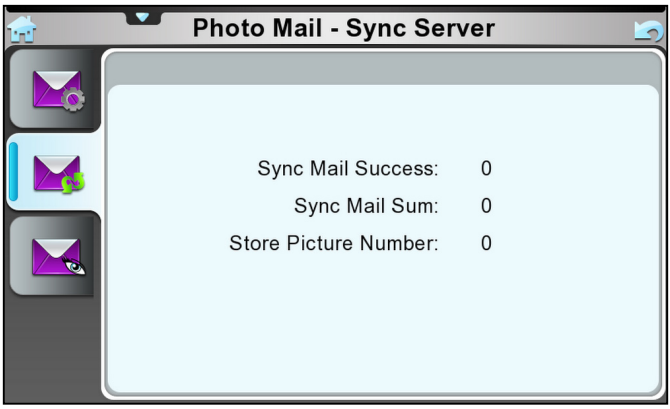

☞ **Note:** If you do not hit the Back button, the sync process will timeout and notify you that an email account is not configured. Simply close this screen and proceed to the next step.

3. Tap the **Configure** tab on the left to go to the configuration screen.

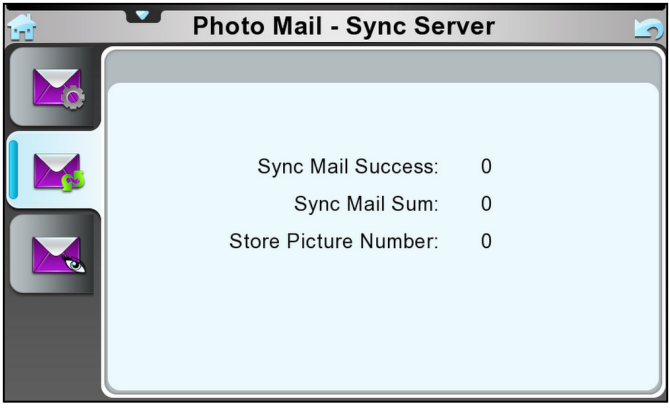

4. Tap on each entry field to select/enter your email information: **Country**, **Email Service**, **Username**, **Password**, and **Sync Interval**. Tap **Save** to save the entries.

☞ **Note:** Alternatively, you can choose **Manual Setting** under the Country selection drop down. This will let you specify your own mail server parameters if it isn't available under the auto configure option.

Syncing

1. From the **Home** screen, tap the **Photo** icon, then select **Photo Mail**.

2. Photo sync will begin immediately. You may also tap on the Sync tab on the left.

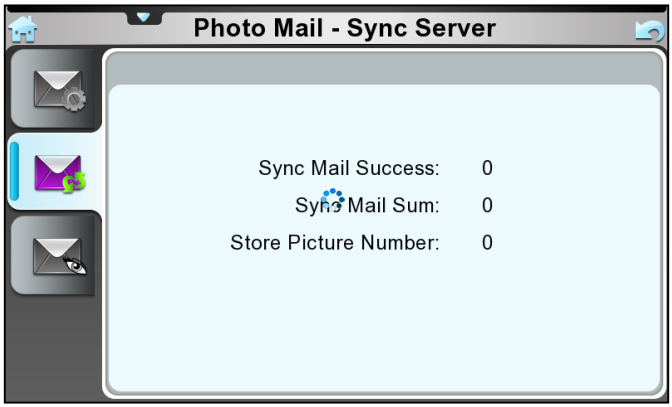

Viewing

1. From the **Home** screen, tap the **Photo** icon, then select **Photo Mail**.

2. Tap the **View** tab on the left to go to the photo list screen. A list of all downloaded photos will appear.

3. Tap a photo filename to select it and select one of the action buttons: **View**, **Select all**, **Move**, **Sort**, or **Delete**.

- View: open the selected photo in full screen
- Select all: selects all the photos
- Move: move the selected photos to another drive
- Sort: sort the photos by name, type, size, or date
- Delete: deletes the selected photos

Calendar

Calendar

From the **Home** screen, tap the **Calendar** icon. The calendar will appear with the year and month showing on top, and the month calendar below it. Click on any day to set it as the current day. Use the +/- adjustment buttons on the left to adjust the year and month.

Slideshow

A photo slideshow will appear to the right of the calendar. Photos will be displayed from the current storage source drive. Press the **Back** button to return to the **Home** screen.

Settings

Source Drive

From the **Home** screen, tap the **Settings** icon. You will see the Select Source screen. If not, tap the **Select Source tab** on the left. From this screen you can select whether to use the **SD/MMC** slot, **USB** flash drive, or **Internal Memory** as your media storage device. Tap an option to select it then tap **Save** to save the setting.

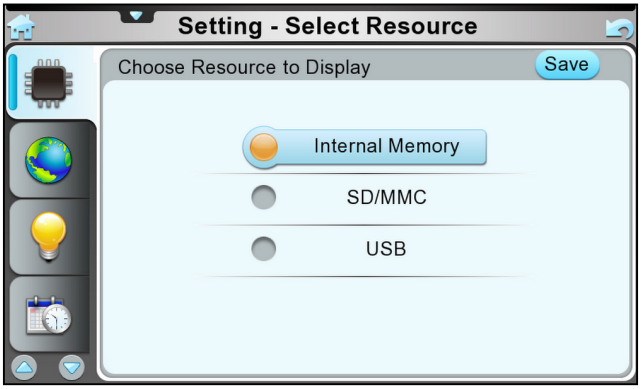

Internet Connection

From the **Home** screen, tap the **Settings** icon, then tap the **Internet Connection tab** on the left. The current connection details will display. If you would like to change your Internet connection, tap the **Modify button** on the upper right corner of the screen. On the following screen you can select to connect to either a **Wireless Network** or to a **Wired Network**.

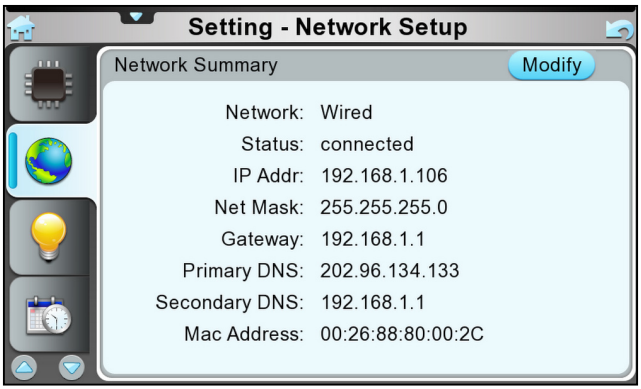

Backlight

From the **Home** screen, tap the **Settings** icon, then tap the **Backlight tab** on the left. The current brightness setting will display. Adjust the slider left/right to adjust the screen brightness to your liking.

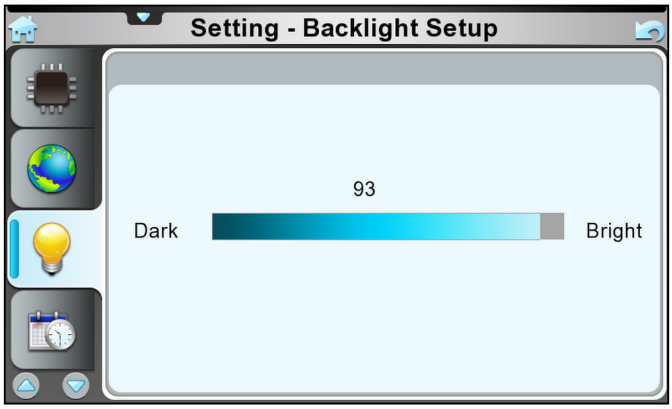

Date & Time

From the **Home** screen, tap the **Settings** icon, then tap the **Date/Time tab** on the left. Use the **up/down arrow** keys to adjust the date and time.

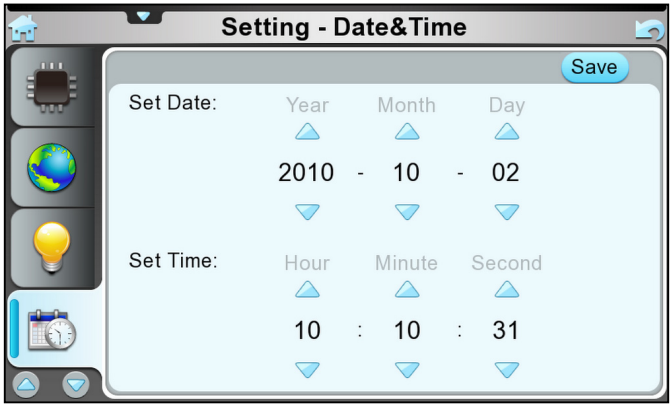

Language

From the **Home** screen, tap the **Settings** icon, then tap the **Language tab** on the left. A list of available languages will appear. Tap on your preferred language, then tap the **Save** button to save the changes.

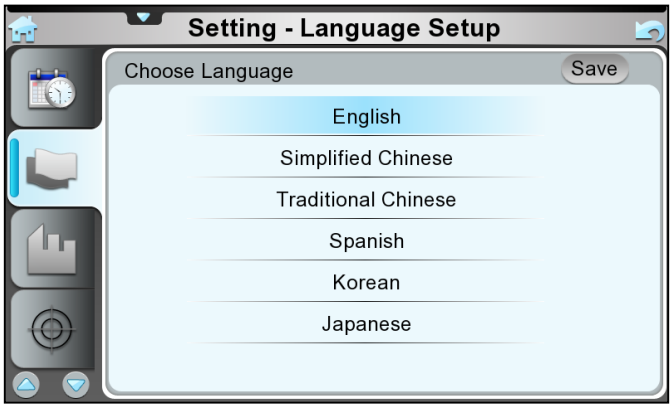

Reset Device

From the **Home** screen, tap the **Settings** icon, then tap the Reset tab on the left. A list of options will appear: **Reset to Factory Default**, **Erase Internal Memory**, and **Device Information, Software Update**.

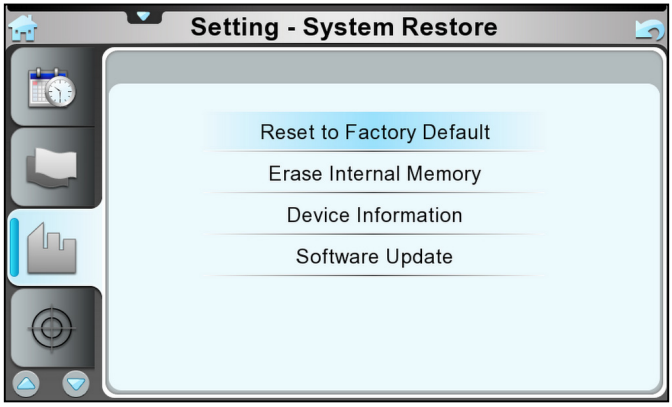

- Reset to Factory Default: resets the unit back to its initial state
- Erase Internal Memory: clears internal memory
- Device Information: displays information about the device
- Software Update: check for any device updates

Touchscreen Calibration

From the **Home** screen, tap the **Settings** icon, then tap the **Touchscreen Calibration tab** on the left. Tap on the **Start** button to begin calibration. Tap on each successive + symbol that appears on screen. Tap on the **Cancel** button to cancel re-calibration.

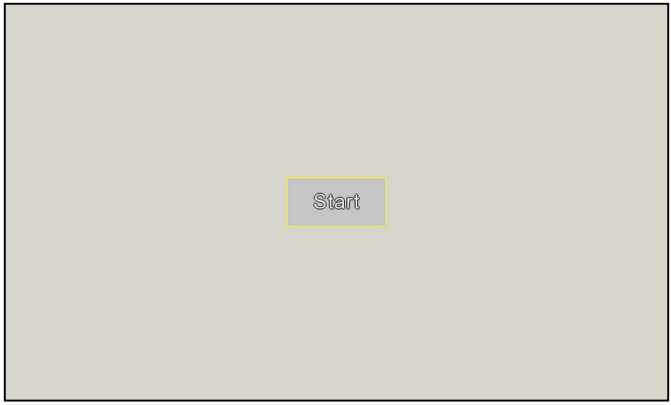

Specifications

Feature	Description
Display	• 7”, 800x480 (15:9) TFT LCD
Touch Screen	• Resistive
Camera	• 0.3 Megapixel CMOS • 640x480 pixels
Video Formats Supported	• AVI, MPG, MPEG, MP4, VOB, 3GP, 3G2, MKV
Audio Formats Supported	• MP3, WAV, WMA, AAC, M4A
Photo Formats Supported	• JPG, JPEG, BMP, PNG, GIF
Connectivity – LAN	• 10/100T Ethernet (RJ-45 port)
Connectivity -- Wi-Fi	• 802.11 b/g Wi-Fi module – Supports WEP, WPA, WPA2, WPS
Storage - Card Reader	• Memory card reader - SD/SDHC, MMC
Storage - USB	• USB 2.0 Host/Device controller
Audio	• Stereo Speaker (1W x2) • Integrated microphone
I/O Connectors	• DC In Jack x1 (10V @ 1.6A) • SD/SDHC/MMC slot x1 • USB Type A connector x1 • RJ-45 x1 • Earphone Jack x1 (3.5Φ, 1/8”) • Mic Jack x1 (3.5Φ, 1/8”)
Switch & Buttons	• On/Off switch x1
LED status	• Power status • Wi-Fi/Wired status
Battery	• Standby Time: 75 - 85 minutes • Talk Time: 65 minutes
Power	• AC Adaptor: 10V/1.6A • Battery: 7.4V/1600mAh

*** CAUTION**

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

Limited Warranty

THE VOSKY MULTIMEDIA TOUCH SCREEN VIDEOPHONE (MTV) PRODUCT IS CONFIGURED IS CONFIGURED TO WORK WITH THE SKYPE SOFTWARE PROVIDED BY SKYPE SOFTWARE S.A.R.L AT THE DATE OF SHIPMENT. NOTWITHSTANDING ANYTHING TO THE CONTRARY HEREIN, VOSKY WILL HAVE NO LIABILITY IF ANY FEATURE OR UTILITY OF MTV FAILS TO PERFORM IN SUBSTANTIAL CONFORMANCE TO THE APPLICABLE SPECIFICATIONS BECAUSE OF ANY CHANGES MADE BY SKYPE ANY CHANGES MADE BY SKYPE TO ITS SOFTWARE OR FEATURES. IF THIS DISCLAIMER IS NOT ACCEPTABLE TO YOU, PLEASE RETURN THE PRODUCT IN ITS ORIGINAL BOX TO YOUR POINT OF PURCHASE WITHIN FIFTEEN (15) DAYS OF PURCHASE TO OBTAIN A REFUND. IN NO EVENT SHALL THE FOREGOING BE DEEMED TO EXPAND ANY WARRANTY OR LIMIT ANY DISCLAIMER CONTAINED HEREIN.

Product Operation Regulatory Requirements:

1. Using any unauthorized softwares, hardwares, and/or any improper operation that will impact the normal functioning of the MTV are prohibit.
2. The warranty is invalid if the manufacture warranty sticker (serial number) has been altered or removed from the product.

Hardware: VoSKY, warrants to the end user ("Customer") that this hardware product will be free from defects in workmanship and materials, under normal use and service, for twelve (12) months from the date of purchase (US) or twenty-four (24) months from the date of purchase (Europe) from VoSKY, or its authorized reseller. VoSKY's sole obligation under this express warranty shall be, at VoSKY's option and expense, to repair the defective product or part, deliver to Customer an equivalent product or part to replace the defective item, or if neither of the two foregoing options is reasonably available, VoSKY may, in its sole discretion, refund to Customer the purchase price paid for the defective product. All products that are replaced will become the property of VoSKY. Replacement products may be new or reconditioned. VoSKY warrants any replaced or repaired product or part for ninety (90) days from shipment, or the remainder of the initial warranty period, whichever is longer.

Software: VoSKY warrants to Customer that each software program licensed from it will perform in substantial conformance to its program specifications, for a period of ninety (90) days from the date of purchase from VoSKY or its authorized reseller. VoSKY warrants the media containing software against failure during the warranty period. The only updates that will be provided are at the sole discretion of VoSKY and will only be available for download at the VoSKY Web site, www.vosky.com . VoSKY's sole obligation under this express warranty shall be, at VoSKY's option and expense, to refund the purchase price paid by Customer for any defective software product, or to replace any defective media with software which substantially conforms to applicable VoSKY published specifications. Customer assumes responsibility for the selection of the appropriate applications program and associated reference materials. VoSKY makes no warranty or representation that its software products will meet Customer's requirements or work in combination with any hardware or applications software products provided by third parties, that the operation of the software products will be uninterrupted or error free, or that all defects in the

software products will be corrected. For any third-party products listed in the VoSKY software product documentation or specifications as being compatible, VoSKY will make reasonable efforts to provide compatibility, except where the non-compatibility is caused by a "bug" or defect in the third party's product or from use of the software product not in accordance with VoSKY published specifications or user guide.

THIS VOSKY PRODUCT MAY INCLUDE OR BE BUNDLED WITH THIRD-PARTY SOFTWARE, THE USE OF WHICH IS GOVERNED BY A SEPARATE END USER LICENSE AGREEMENT.

THIS VOSKY WARRANTY DOES NOT APPLY TO SUCH THIRDPARTY SOFTWARE. FOR THE APPLICABLE WARRANTY, PLEASE REFER TO THE END-USER LICENSE AGREEMENT GOVERNING THE USE OF SUCH SOFTWARE.

Obtaining Warranty Service: Customer may contact VoSKY Technical Support Center within the applicable warranty period to obtain warranty service authorization. Dated proof of purchase from VoSKY or its authorized reseller may be required. Products returned to VoSKY must be pre-authorized by VoSKY with a Return Merchandise Authorization (RMA) number marked on the outside of the package, and sent prepaid and packaged appropriately for safe shipment, and it is recommended that they be insured or sent by a method that provides for tracking of the package. The repaired or replaced item will be shipped to Customer, at VoSKY's expense, not later than thirty (30) days after VoSKY receives the defective product.

VoSKY shall not be responsible for any software, firmware, information, memory data, or Customer data contained in, stored on, or integrated with any products returned to VoSKY for repair, whether under warranty or not.

WARRANTIES EXCLUSIVE: IF A VOSKY PRODUCT DOES NOT OPERATE AS WARRANTED ABOVE, CUSTOMER'S SOLE REMEDY FOR BREACH OF THAT WARRANTY SHALL BE REPAIR, REPLACEMENT, OR REFUND OF THE PURCHASE PRICE PAID, AT VOSKY'S OPTION. TO THE FULL EXTENT ALLOWED BY LAW, THE FOREGOING WARRANTIES AND CONDITIONS, EXPRESS OR IMPLIED, EITHER IN FACT OR BY OPERATION OF LAW, STATUTORY OR OTHERWISE, INCLUDING WARRANTIES, TERMS OR CONDITIONS OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, SATISFACTORY QUALITY, CORRESPONDENCE WITH DESCRIPTION, AND NON-INFRINGEMENT, ALL OF WHICH ARE EXPRESSLY DISCLAIMED. VOSKY NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR IT ANY OTHER LIABILITY IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE OR USE OF ITS PRODUCTS.

VOSKY SHALL NOT BE LIABLE UNDER THIS WARRANTY IF ITS TESTING AND EXAMINATION DISCLOSE THAT THE ALLEGED DEFECT OR MALFUNCTION IN THE PRODUCT DOES NOT EXIST OR WAS CAUSED BY CUSTOMER'S OR ANY THIRD PERSON'S MISUSE, NEGLECT, IMPROPER INSTALLATION OR TESTING, UNAUTHORIZED ATTEMPT TO OPEN, REPAIR OR MODIFY THE PRODUCT, OR ANY OTHER CAUSE BEYOND THE RANGE OF THE INTENDED USE, OR BY ACCIDENT, FIRE, LIGHTNING, OTHER HAZARDS, OR ACTS OF GOD.

LIMITATION OF LIABILITY: TO THE FULL EXTENT ALLOWED BY LAW, VOSKY ALSO EXCLUDES FOR ITSELF AND ITS SUPPLIERS ANY LIABILITY, WHETHER BASED IN CONTRACT OR TORT (INCLUDING NEGLIGENCE), FOR INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY KIND, OR FOR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE SALE, INSTALLATION, MAINTENANCE, USE, PERFORMANCE, FAILURE, OR INTERRUPTION OF ITS PRODUCT, EVEN IF VOSKY OR ITS AUTHORIZED RESELLER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, AND LIMITS ITS LIABILITY TO REPAIR, REPLACEMENT, OR REFUND OF THE PURCHASE PRICE PAID, AT VOSKY'S OPTION. THIS DISCLAIMER OF LIABILITY FOR DAMAGES WILL NOT BE AFFECTED IF ANY REMEDY PROVIDED HEREIN

SHALL FAIL OF ITS ESSENTIAL PURPOSE.

Disclaimer: Some countries, states or provinces do not allow the exclusion or limitation of implied warranties or the limitation of incidental or consequential damages for certain products supplied to consumers or the limitation of liability for personal injury, so the above limitations and exclusions may be limited in their application to you. When the implied warranties are not allowed to be excluded in their entirety, they will be limited to the duration of the applicable written warranty. This warranty gives you specific legal rights which may vary depending on local law.

Dispute Resolution: The customer may contact the Director of Technical Support in the event the Customer is not satisfied with VoSKY's response to the complaint. In the event that the Customer is still not satisfied with the response of the Director of Technical Support, the Customer is instructed to contact the Director of Marketing. In the event that the Customer is still not satisfied with the response of the Director of Marketing, the Customer is instructed to contact the Chief Financial Officer and/or President.

Governing Law: This Limited Warranty shall be governed by the laws of the State of California, U.S.A., excluding its conflicts of laws and principles, and excluding the United Nations Convention on Contracts for the International Sale of Goods.

VoSKY®
Your Ultimate Gateway to Skype